



# MAQ<sup>®</sup> 20

## Industrial Data Acquisition and Control System

### MA1061

## MAQ20-DODC20SK Hardware User Manual



**MAQ20-DODC20SK Hardware User Manual**

**MA1061 Rev. B – March 2024**

**© 1984 – 2024 Dataforth Corporation. All Rights Reserved.**

**[ISO9001:2015-Registered QMS](#)**

The information in this manual has been checked carefully and is believed to be accurate; however, Dataforth assumes no responsibility for possible inaccuracies or omissions. Specifications are subject to change without notice.

The information, tables, diagrams, and photographs contained herein are the property of Dataforth Corporation. No part of this manual may be reproduced or distributed by any means, electronic, mechanical, or otherwise, for any purpose other than the purchaser's personal use, without the express written consent of Dataforth Corporation.

MAQ<sup>®</sup>20 is a registered trademark of Dataforth Corporation.

ReDAQ<sup>®</sup> is a registered trademark of Dataforth Corporation

Modbus<sup>®</sup> is a registered trademark of the Modbus Organization, Inc.

LabVIEW<sup>™</sup> is a trademark of National Instruments Corporation

**Table of Contents**

1.0 System Features ..... 1

2.0 System Description and Documentation ..... 2

3.0 Unpacking ..... 4

4.0 Module Dimensions and I/O Connections ..... 4

5.0 Installation ..... 5

6.0 Building a System ..... 6

7.0 Maintaining a System ..... 7

8.0 Expanding a System ..... 8

9.0 MAQ20 I/O Module Registration ..... 10

10.0 Writing Discrete Output Channels ..... 13

11.0 Setting Default Outputs ..... 16

12.0 Reset Functions ..... 19

13.0 Module Identification and Status Registers ..... 20

14.0 LED Indicators ..... 20

15.0 Specifications ..... 22

16.0 MAQ20-DODC20SK Address Map ..... 23

## About Dataforth Corporation

“Our passion at Dataforth Corporation is designing, manufacturing, and marketing the best possible signal conditioning, data acquisition, and data communication products. Our mission is to set new standards of product quality, performance, and customer service.” Dataforth Corporation, with more than a quarter century of experience, is the worldwide leader in Instrument Class® Industrial Electronics – rugged, high performance signal conditioning, data acquisition, and data communication products that play a vital role in maintaining the integrity of industrial automation, data acquisition, and quality assurance systems. Our products directly connect to most industrial sensors and protect valuable measurement and control signals and equipment from the dangerous and degrading effects of noise, transient power surges, internal ground loops, and other hazards present in industrial environments.

Dataforth spans the globe with more than 50 International Distributors and US Representative Companies. Our customers benefit from a team of over 130 salespeople highly trained in the application of precision products for industrial markets. In addition, we have a team of application engineers in our Tucson factory ready to solve any in-depth application questions. Upon receipt of an RFQ or order, our Customer Service Department provides fast one-day delivery information turnaround. We maintain an ample inventory that allows small quantity orders to be shipped from stock.

Dataforth operates under an [ISO9001:2015](#) quality management system.

## Contacting Dataforth Corporation

Contact Method	Contact Information
<b>E-Mail:</b> Technical Support	<a href="mailto:support@dataforth.com">support@dataforth.com</a>
<b>Website:</b>	<a href="http://www.dataforth.com">www.dataforth.com</a>
<b>Phone:</b>	+1-520-741-1404 and toll free +1-800-444-7644
<b>Fax:</b>	+1-520-741-0762
<b>Mail:</b>	Dataforth Corporation 3331 E. Hemisphere Loop Tucson, AZ 85706 USA

## Errata Sheets

Refer to the Technical Support area of Dataforth’s website ([www.dataforth.com](http://www.dataforth.com)) for any errata information on this product.

## 1.0 System Features

The MAQ20 Data Acquisition System encompasses more than 30 years of design excellence in the process control industry. It is a family of high performance, DIN rail mounted, programmable, multi-channel, industrially rugged signal conditioning I/O and communications modules.

### Instrument Class Performance

- $\pm 0.035\%$  Accuracy
- Industry leading  $\pm 0.3^\circ\text{C}$  CJC Accuracy over full operating temperature range
- Ultra-low Zero and Span Tempco
- Over-range on one channel does not affect other channels
- 1500Vrms Channel-to-Bus Isolation
- 240Vrms Continuous Field I/O Protection
- ANSI/IEEE C37.90.1 Transient Protection
- Ventilated Communications and I/O Modules
- Industrial Operating Temperature of  $-40^\circ\text{C}$  to  $+85^\circ\text{C}$
- Wide Range 7-34VDC Power
- CE Compliant
- UL/cUL (Class I, Div 2, Groups A, B, C, D) Compliant, file E232858
- ATEX Compliance pending

### Industry Leading Functionality

- The system is a Modbus Server and can be operated remotely with no local PC
- Up to 4GB of logged data can be transferred via FTP during real-time acquisition
- Up to 24 I/O modules, 384 analog / 480 discrete channels, per system, per 19" rack width
- Per-channel configurable for range, alarms, and other functions
- Backbone mounts within DIN rail and distributes power and communications
- System firmware automatically registers the installation and removal of I/O modules
- I/O modules can be mounted remotely from the Communications Module
- Equal load sharing power supply modules allow for system expansion
- Hot Swappable I/O modules with Field-side pluggable terminal blocks on most models
- Sophisticated package enables high density mounting in 3U increments
- DIN Rail can be mounted on a continuous flat panel or plate

### **Distributed Processing Enables Even More Functionality**

- Output modules are programmable for user-defined waveforms
- Discrete I/O modules have seven high level functions:
  - Pulse Counter
  - Frequency Counter
  - Waveform Measurement
  - Time Between Events
  - Frequency Generator
  - PWM Generator
  - One-Shot Pulse Generator

### **Multiple Software Options**

- Free Configuration Software
  - ReDAQ Shape Graphical HMI Design & Runtime Solution
- Intuitive Graphical Control Software
  - ReDAQ Shape Graphical HMI Design & Runtime Solution
  - Python API
  - OPC Server
  - Programming examples and LabVIEW Vis

## **2.0 System Description and Documentation**

A MAQ®20 Data Acquisition System must have as a minimum a Communications Module, a Backbone, and one I/O Module. Examples include but are not limited to:

- MAQ20-COMx Communications Module with Ethernet, USB and RS-232 or RS-485 Interface
- MAQ20-DIOx Discrete Input / Output Module
- MAQ20-xTC Type x Thermocouple Input Module
- MAQ20-mVxN, -VxN Voltage Input Module
- MAQ20-IxN Process Current Input Module
- MAQ20-IO, -VO Process Current Output and Process Voltage Output Module
- MAQ20-BKPLx x Channel System Backbone

Refer to <https://www.dataforth.com/mag20> for a complete listing of available modules and accessories.

System power is connected to the Communications Module, which in turn powers the I/O modules. For systems with power supply requirements exceeding what the Communications Module can provide, the [MAQ20-PWR3](#) Load Share Power Supply module is used to provide additional power. When a MAQ20 I/O module is inserted into a system, module registration occurs automatically, data acquisition starts, and data is stored locally in the module. The system is based on a Modbus compatible memory map for easy access to acquired data, configuration settings, and alarm limits. Information is stored in consistent locations in module memory for ease of use and system design.

MAQ20 modules are designed for installation in Class I, Division 2 hazardous locations and have a high level of immunity to environmental noise commonly present in heavy industrial environments.

The MAQ20-DODC20SK module has 20 isolated discrete output channels that can switch up to 60VDC signals and carry up to 3A of current. Channels can be switched individually or in block format. User configurable default output states which are set upon power up or module reset ensure failsafe operation for critical applications. Logic polarity can be user defined as standard or inverted. The isolated field outputs are designed for harsh industrial environments and have fast switching times. Field output connections are made through high density spring cage terminal blocks.

Output-to-Bus isolation is a robust 1500Vrms and each individual channel is protected up to 150Vrms continuous overload in the case of wiring faults or inadvertent wiring errors. 150Vrms channel-to-channel isolation gives the module the ability to control equipment with or without common signal grounds or different pieces of equipment with multiple reference potentials. The high channel count within the narrow module package gives exceptional functionality while preserving valuable mounting space and the high density minimizes cost per channel resulting in economical control solutions.

For details on installation, configuration, and system operation, refer to the manuals and software available for download from [www.dataforth.com](http://www.dataforth.com). This includes, but is not limited to:

MA1036 MAQ@20 Quick Start Guide

MA1040 MAQ@20 Communications Module Hardware User Manual

MA1041 MAQ@20 milliVolt, Volt, and Current Input Module Hardware User Manual

MA1037 MAQ@20 Configuration Software Tool User Manual

MA1038 MAQ@20 ReDAQ Shape for MAQ@20 User Manual

MAQ20-940 ReDAQ Shape Software for MAQ@20 – Developer Version

MAQ20-941 ReDAQ Shape Software for MAQ@20 – User Version

MAQ20-945 MAQ@20 Configuration Software Tool

MAQ20-952 IPEMotion Software for MAQ@20

### 3.0 Unpacking

Each MAQ20 Data Acquisition System component is shipped in electro-static discharge (ESD) protective packaging. Use appropriate ESD protection measures while unpacking. Check visually for physical damage. If physical damage is noted, file a claim with the shipping carrier and contact the factory.

### 4.0 Module Dimensions and I/O Connections


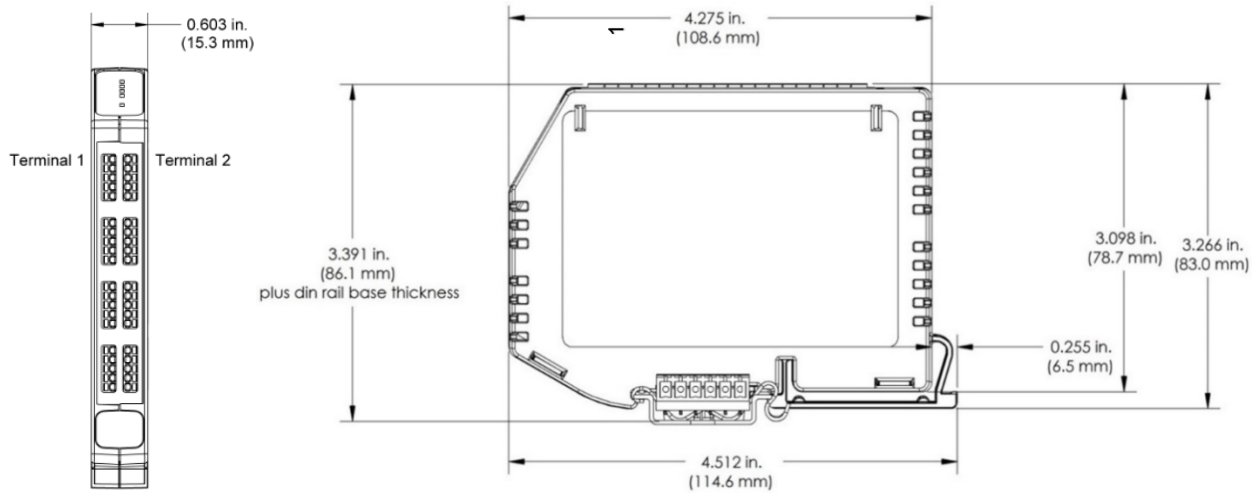


Figure 1: Module Dimensions

Table 1: MAQ20-DODC20SK I/O Terminal Block Connections

FIELD CONNECTION	TERMINAL	TERMINAL	FIELD CONNECTION
CH0 +OUT	1	2	CH0 -OUT
CH1 +OUT	3	4	CH1 -OUT
CH2 +OUT	5	6	CH2 -OUT
CH3 +OUT	7	8	CH3 -OUT
CH4 +OUT	9	10	CH4 -OUT
CH5 +OUT	11	12	CH5 -OUT
CH6 +OUT	13	14	CH6 -OUT
CH7 +OUT	15	16	CH7 -OUT
CH8 +OUT	17	18	CH8 -OUT
CH9 +OUT	19	20	CH9 -OUT
CH10 +OUT	21	22	CH10 -OUT
CH11 +OUT	23	24	CH11 -OUT
CH12 +OUT	25	26	CH12 -OUT
CH13 +OUT	27	28	CH13 -OUT
CH14 +OUT	29	30	CH14 -OUT
CH15 +OUT	31	32	CH15 -OUT
CH16 +OUT	33	34	CH16 -OUT
CH17 +OUT	35	36	CH17 -OUT
CH18 +OUT	37	38	CH18 -OUT
CH19 +OUT	39	40	CH19 -OUT



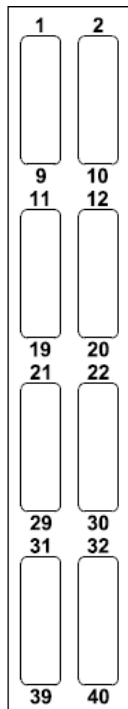

The high-density spring cage terminal blocks can accept the following wire sizes:

Solid Wire	AWG 25 to AWG 21
Stranded Wire	AWG 24 to AWG 21


## 5.0 Installation

The MAQ20 I/O module package has been designed for easy insertion into and removal from a system and can mate with DIN rails mounted flush on continuous panels or plates.

To install a module:


1. Orient the module with the field connector facing out.
2. Align the angled surface on the top rear corner with panel or plate the DIN rail is mounted to.
3. Slide the module down to capture the DIN rail with the hook on the module.
4. Rotate the module and snap in place.

To remove a module, reverse the steps in the installation process. If space is available, the clip at the bottom of the module can be squeezed by hand to release. For tight installations, insert a flat blade screwdriver into the recess in the clip (5), place the shaft of the screwdriver against the curved part of the clip and gently pry the clip to release (6) as shown in Figure 2 below.

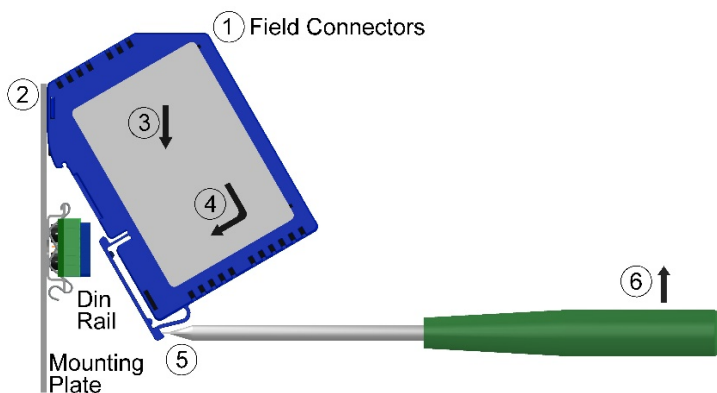

**Figure 2: Installation and Removal**

Multiple rows of MAQ20 modules can be mounted at a 3U vertical spacing interval. Backbones can be combined to add I/O modules to a system. A system is only allowed to have one MAQ20-COMx module. Some possible configurations in a 19" rack are shown in Figure 3 below.

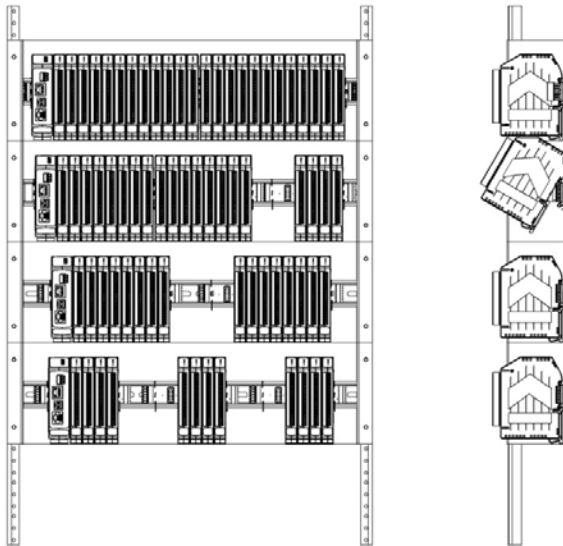

**Figure 3: Possible System Configurations**

## 6.0 Building a System

An automated I/O module registration process reduces system setup to three basic steps:

### STANDARD SETUP PROCESS

- 1.) Install a MAQ20-BKPLx backbone in a DIN rail then insert a MAQ20-COMx module in the left-most position and apply power.
- 2.) Install any MAQ20 I/O Module in any vacant local or remote backbone position. Observe that the green Power LED is on, and communications activity is seen on the TX and RX LEDs. Allow 1 second for registration. This module has now been assigned Registration Number 1.  
  
Label and connect field wiring to the I/O Module. If desired, record module physical position in the system.
- 3.) Repeat Step 2 for all remaining MAQ20 I/O modules in the system. Subsequent modules installed are assigned Registration Number 2, 3, etc. The Registration Number sequence matches the physical sequence of module installation.

### ALTERNATE SETUP PROCESS

- 1.) Do not apply power. Install a MAQ20-BKPLx backbone in a DIN rail then insert a MAQ20-COMx module in the left-most position and install all required MAQ20 I/O modules in any vacant local or remote backbone position. Label and connect field wiring to the I/O Module and if desired record physical position in the system.
- 2.) Apply system power and observe that each module has the green Power LED on, and communications activity is seen on the TX and RX LEDs. Allow 5 seconds for full system registration. All modules have now been assigned Registration Numbers, but in a random sequence not associated with the physical position on the backbone.

**NOTES:**

Once the registration process is complete, Registration Numbers are permanent as long as I/O modules are not removed from or added to a system. When system power is cycled or the system is reset, I/O module Registration Numbers will always remain the same. If I/O modules are removed while the system is powered, they will be unregistered, and the slots or registration numbers become available to register modules once inserted. If I/O modules are removed while the system is powered and then the power is cycled, the remaining modules will remain registered with their assigned Registration Numbers.

I/O modules in a system are identified in general by their model number (MAQ20-VDN, MAQ20-JTC, etc.) and uniquely by their Serial Number printed on the side label (i.e. 1234567-89). When I/O modules are installed in the system, only a general identifier is visible on the front of the module (V, I, TCPL, etc.). Wire tags or additional labeling applied to the module terminal block may be used for visible unique identification in an installed system.

MAQ20-940 ReDAQ Shape Software for MAQ20 automatically assigns tag names to each input and output channel. These can be changed by the customer to associate channels with input wiring or parameters measured and controlled.

The system does not identify I/O modules by physical position on a backbone, only by registration sequence. MAQ20-940 ReDAQ Shape Software for MAQ20 provided by Dataforth shows a graphical representation of a system based on registration sequence and not by physical position. Tools within the software package allow the user to reassign Registration Numbers thereby making graphical representations match physical location for a single, local backbone. For further details, see [Section 9.0](#).

Module Detect: A write to the Module Detect Register at I/O module address 98 plus the module offset based on Registration Number will blink the STAT LED on the top angled surface of the module at a 5Hz rate for 5 seconds so the module location in a system can be visually identified.

## 7.0 Maintaining a System

The MAQ20-COMx Communications Module periodically scans the system and will detect if a MAQ20 I/O module has been removed from the system or has lost communications. When this happens the module Registration Number will be released and available for reassignment.

Standard system maintenance involves a simple three step process:

### STANDARD MAINTENANCE PROCESS

- 1.) Turn system power on and observe communications activity on the I/O modules.
- 2.) **CASE 1:** I/O module is replaced with one having a different model number or serial number:  
Remove a single MAQ20 I/O module from any local or remote backbone position. Replace the module with another having a different model number. This module can be installed in any vacant local or remote backbone position. Observe that the green Power LED is on and that there is communications activity on the TX and RX LEDs. Allow 1 second for registration. This module now has the same Registration Number as the one removed.

**CASE 2:** I/O module is suspected faulty and is to be replaced with the same model number: Remove a single MAQ20 I/O module from any local or remote backbone position. Replace the module with another of the same model number. This module can be installed in any vacant local or remote backbone position. Observe that the green Power LED is on, and communications activity is seen on the TX and RX LEDs. Allow 1 second for registration. This module now has the same Registration Number as the one removed.

Label and connect input/output wiring to the I/O module and if desired record physical position in the system.

- 3.) Repeat Step 2 for any remaining MAQ20 I/O modules in the system requiring maintenance.

### ALTERNATE MAINTENANCE PROCESS

- 1.) With the system power off, remove any I/O modules which are to be replaced. Replace the modules with others of the same or different model numbers. Modules can be installed in any vacant local or remote backbone position.

Label and connect input/output wiring to the I/O module and if desired record physical position in the system.

- 2.) Apply system power and observe that each module has the green Power LED on and communications activity is seen on the TX and RX LEDs. Allow 5 seconds for full system registration. Replaced modules have now been assigned the Registration Numbers of those removed, but in a random sequence not associated with the physical position on the backbone. Modules which were not replaced retain their assigned Registration Numbers.

### NOTES:

Once the registration process is complete, Registration Numbers are permanent as long as I/O modules are not removed from or added to a system. When system power is cycled or the system is reset, I/O module Registration Numbers will always remain the same. Tools within MAQ20-940 ReDAQ Shape Software for MAQ20 allow the user to reassign Registration Numbers. For further details, see [Section 9.0](#).

Module Detect: A write to the Module Detect Register at I/O module address 98 plus the module offset based on Registration Number will blink the STAT LED on the top angled surface of the module at a 5Hz rate for 5 seconds so the module location in a system can be visually identified.

## 8.0 Expanding a System

The MAQ20-COMx Communications Module periodically scans the system and will detect if a MAQ20 I/O module has been added. When this happens the next available sequential Registration Number is assigned to the module.

Standard system expansion involves a simple three step process:

## STANDARD EXPANSION PROCESS

- 1.) Turn system power on and observe communications activity on the I/O modules.
- 2.) Add a single MAQ20 I/O module in any local or remote backbone position. Observe that the green Power LED is on, and communications activity is seen on the TX and RX LEDs. Allow 1 second for registration. This module has now been assigned the next available sequential Registration Number.

Label and connect input/output wiring to the I/O module and if desired record physical position in the system.

- 3.) Repeat Step 2 for all remaining MAQ20 I/O modules to be added to the system. Subsequent modules installed are assigned the next sequential Registration Number.

## ALTERNATE EXPANSION PROCESS

- 1.) With system power off, install all additional MAQ20 I/O modules in any vacant local or remote backbone positions. Label and connect field wiring to the I/O module and if desired record physical position in the system. Do not apply power.
- 2.) Apply system power and observe that each module has the green Power LED on, and communications activity is seen on the TX and RX LEDs. Allow 5 seconds for full system registration. Added modules have now been assigned the next available sequential Registration Numbers, but in a random sequence not associated with the physical position on the backbone. Modules previously installed and registered in the system retain their assigned Registration Numbers.

## NOTES:

Once the registration process is complete Registration Numbers are permanent as long as I/O modules are not removed from or added to a system. When system power is cycled or the system is reset, I/O module Registration Numbers will always remain the same. If I/O modules are removed while the system is powered, they will be unregistered, and the slots or registration numbers become available to register modules once inserted. If I/O modules are removed while the system is powered and then the power is cycled, the remaining modules will remain registered with their assigned Registration Numbers. Tools within MAQ20-940 ReDAQ Shape Software for MAQ20 allow the user to reassign Registration Numbers. For further details, see [Section 9.0](#).

Module Detect: A write to the Module Detect Register at I/O module address 98 plus the module offset based on Registration Number will blink the STAT LED on the top angled surface of the module at a 5Hz rate for 5 seconds so the module location in a system can be visually identified.

## 9.0 MAQ20 I/O Module Registration

The MAQ20 Data Acquisition System uses an automated registration process which periodically scans the system and will detect when MAQ20 I/O modules are added and removed. Modules are assigned a sequential Registration Number based on the order in which they are detected. This order can be forced to occur in a given sequence by adding modules one at a time or it can be allowed to happen randomly. For further details, see [Section 6.0](#), [Section 7.0](#), and [Section 8.0](#).

The system does not identify I/O modules by physical position on a backbone, only by registration sequence. MAQ20-940 ReDAQ Shape Software for MAQ20 provided by Dataforth shows a graphical representation of a system based on registration sequence and not by physical position. Tools within the software package allow the user to reassign Registration Numbers thereby making graphical representations match physical location for a single, local backbone.

Module Detect: A write to the Module Detect Register at I/O module address 98 plus the module offset based on Registration Number will blink the STAT LED on the top angled surface of the module at a 5Hz rate for 5 seconds so the module location in a system can be visually identified.

Each module is assigned an address space of 2000 addresses based on the Registration Number and starting at address 2000. I/O module with Registration Number 1 is assigned address space 2000 – 3999, I/O module with Registration Number 2 is assigned address space 4000 – 5999 and so on. The starting address for the module is very important because this is the offset address that must be added to the addresses listed in the I/O module address map to know where data for that module is located within the system level address map. The MAQ20-COMx Communication Module is always assigned a Registration Number of 0.

The automated registration process can be disabled and I/O modules can be registered using a manual process if required by an application. Refer to [MA1040](#) MAQ20 Communications Module Hardware User Manual for details.

The [MAQ20-DODC20SK Address Map](#) is found at the end of this manual. An excerpt from the Address Map is shown on the next page. Channel Data is stored starting at address 1000.

### NOTE:

**THE MAQ20-DODC20SK MODULE CAN BE SPECIFIED TO USE STANDARD OR INVERTED LOGIC.**

**FOR STANDARD LOGIC, WRITING A 0 TO A DISCRETE OUTPUT CHANNEL OPENS THE SOLID-STATE SWITCH AND WRITING A 1 CLOSSES THE SWITCH.**

**FOR INVERTED LOGIC, WRITING A 0 TO A DISCRETE OUTPUT CHANNEL CLOSSES THE SOLID-STATE SWITCH AND WRITING A 1 OPENS THE SWITCH.**

**NOTE:**

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number.

Address Range 1000 - 1299: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1000	R/W	20	Discrete Output States, Binary Representation, Addr 1000 = LSB, Addr 1019 = MSB	Discrete Output States. Standard or Inverted Logic as defined in Register 1041.	DO0 - DO19 Standard Logic 0 = Switch Open 1 = Switch Closed  DO0 - DO19 Inverted Logic 0 = Switch Closed 1 = Switch Open	INT16
1041	R/W	1	Logic Polarity	0 = Standard Logic (Default) 1 = Inverted Logic	0 or 1	INT16

*Example: A MAQ20-DODC20SK module with serial number 1234567-89 is installed in a system and has been assigned a Registration Number of 4. Write data to the discrete output channels to control the switches.*

The MAQ20-DODC20SK module with s/n 1234567-89 has an address offset of  $2000 * 4 = 8000$

Assume the factory default setting of standard logic polarity.

Address  $8000 + 1041 = 9041$  is set to 0


Write to the DO channels DO0 – DO19 at addresses  $8000 + 1000$  to  $1019 = 9000$  to  $9019$

Write a 0 to these registers to open the switches.

Write a 1 to these registers to close the switches.


The MAQ20-940 ReDAQ Shape Software for MAQ20 has a utility which allows the user to reassign Registration Numbers to I/O Modules in a system. This can be used to rearrange the way I/O modules are displayed in the software if the Alternate Registration Processes have been used instead of the Standard Registration Processes. These are described in [Section 6.0](#), [Section 7.0](#) and [Section 8.0](#).

ReDAQ Shape Software for MAQ20 presents a graphical representation of the system on the Acquire panel as shown in Figure 4. I/O modules are displayed sequentially left to right in the order they were registered. The display does not represent physical position and will not show physical vacant positions between I/O modules. The system graphic shows a 24 position backbone regardless of the backbone or combination of backbones used in a system.

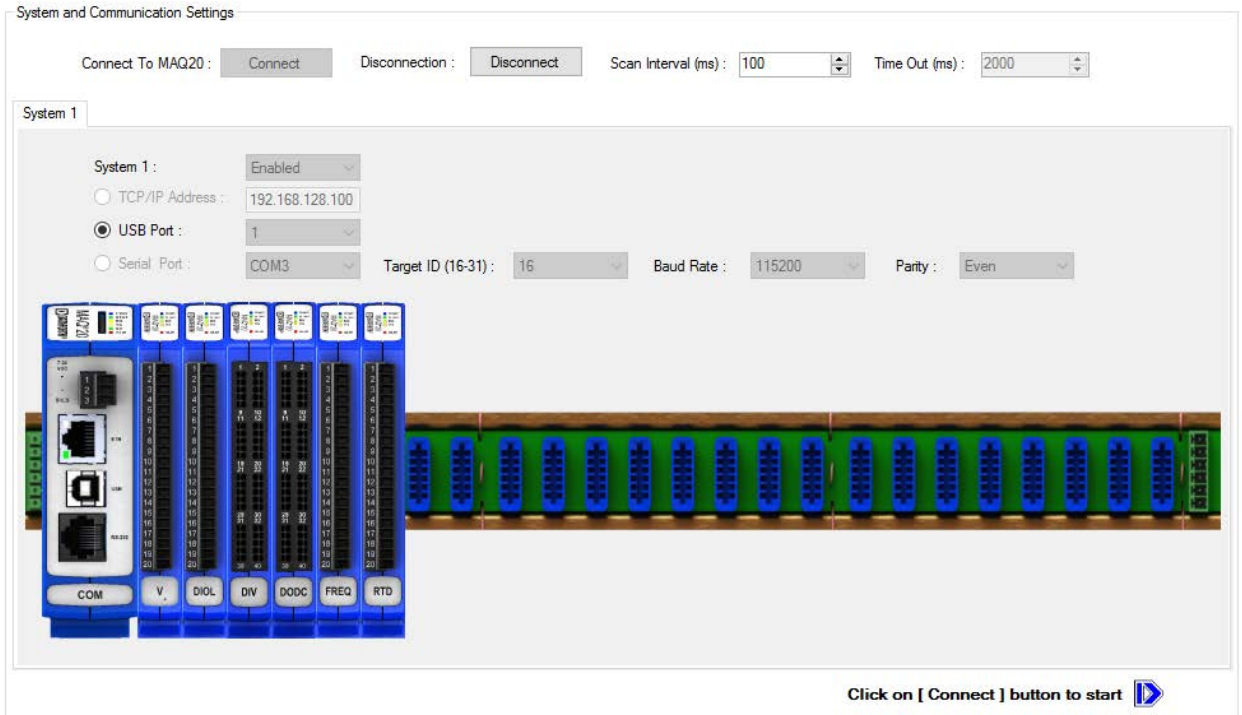

**Figure 4: MAQ20-940 ReDAQ Shape for MAQ20 Main Configuration Screen**

To view the registration sequence, double-click on the MAQ20-COMx graphic to obtain the listing shown in Figure 5.

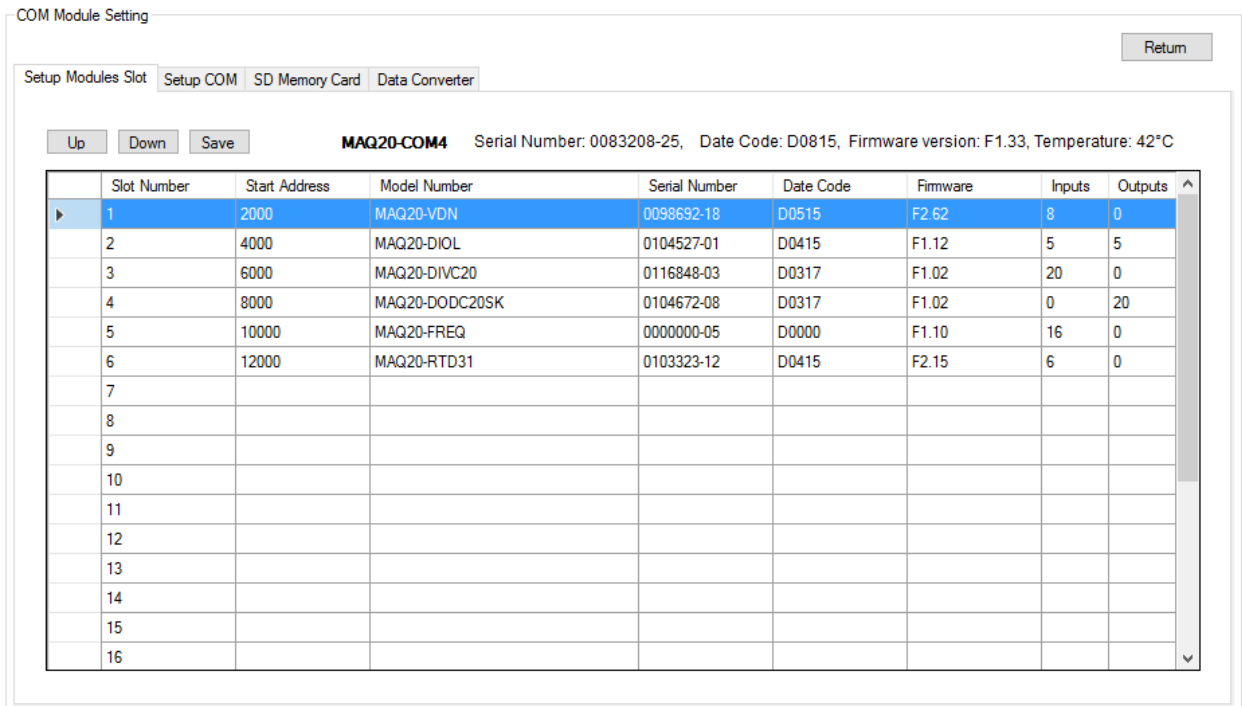

**Figure 5: Module Registration using MAQ20-940 ReDAQ Shape for MAQ20**



Registration Numbers are listed in the left column. The column title Slot Number is the same as the Registration Number and refers to the position where the software has registered the I/O module. Slot Number or Registration Number will not necessarily be the same as the physical position of the module in the system. To change the Registration Number of an I/O module, click the box in the left column next to the Registration Number, then use the Up and Down buttons to move the module within the sequence. The system automatically reassigns the I/O modules above and below the one moved. Repeat for other modules if desired. The MAQ20-COMx module always has Registration Number 0 and cannot be moved. Press 'Save' to save the new configuration. The new registration sequence is permanent as long as I/O modules are not removed from or added to a system.


## 10.0 Writing Discrete Output Channels

The MAQ20-DODC20SK module has 20 discrete input channels that can switch up to 60VDC signals and sink up to 3A of current. Discrete output states can be written individually or as a block. Logic polarity can be user defined as standard or inverted. Channel-to-Channel isolation is 150Vrms. Each individual channel has continuous overload protection in the case of inadvertent wiring errors.

**FOR STANDARD LOGIC, WRITING A 0 TO A DISCRETE OUTPUT CHANNEL OPENS THE SOLID-STATE SWITCH AND WRITING A 1 CLOSSES THE SWITCH.**

**FOR INVERTED LOGIC, WRITING A 0 TO A DISCRETE OUTPUT CHANNEL CLOSSES THE SOLID-STATE SWITCH AND WRITING A 1 OPENS THE SWITCH.**

The basic circuit topology is shown in Figure 6. The open drain output and channel-to-channel isolation allow connection to high-side or and low-side loads.

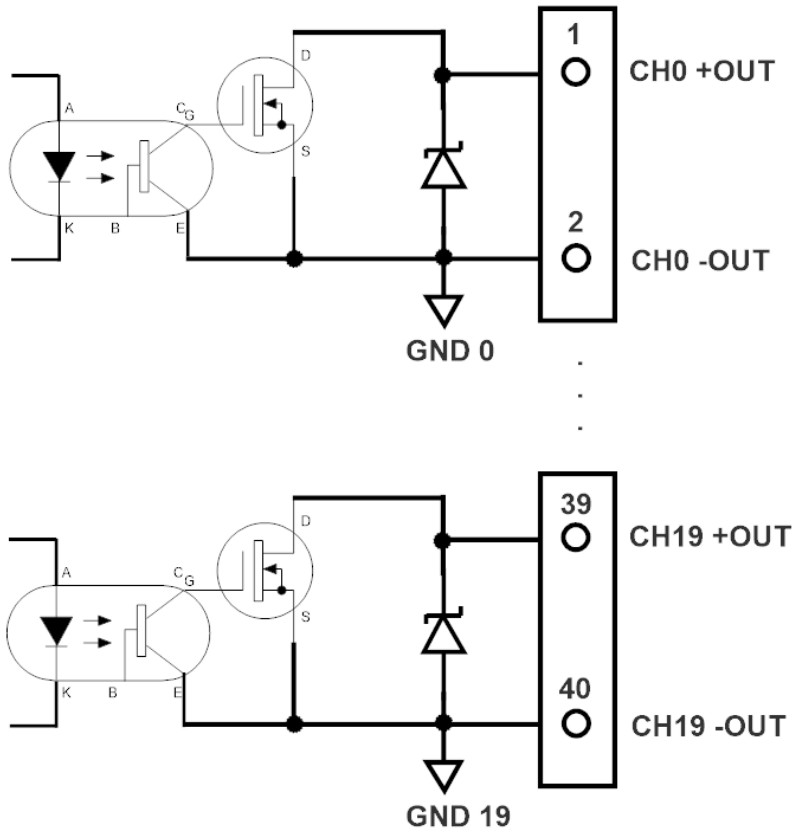

**NOTES:** Open Drain Outputs.  
 Outputs are channel-to-channel isolated to 150Vrms.

**Figure 6: MAQ20-DODC20SK Discrete Output Circuit Topology**

The [MAQ20-DODC20SK Address Map](#) is found at the end of this manual. An excerpt from the Address Map is shown below.

**NOTE:**

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to [Section 9.0](#) for further details on Registration Number.

Address Range 1000 - 1299: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1000	R/W	20	Discrete Output States, Binary Representation, Addr 1000 = LSB, Addr 1019 = MSB	Discrete Output States. Standard or Inverted Logic as defined in Register 1041.	DO0 - DO19 Standard Logic 0 = Switch Open 1 = Switch Closed  DO0 - DO19 Inverted Logic 0 = Switch Closed 1 = Switch Open	INT16
1035	R	1	Discrete Output States, Block Read, MSB	Decimal Equivalent of Discrete Output Data MSB (Channels 16-19)	0 to 15	INT16
1036	R	1	Discrete Output States, Block Read, LSB	Decimal Equivalent of Discrete Output Data LSB (Channels 0-15)	0 to 65,535	INT16
1038	W	1	Discrete Output States, Block Write, MSB	Decimal Equivalent of Discrete Output Data MSB (Channels 16-19)	0 to 15	INT16
1039	W	1	Discrete Output States, Block Write, LSB	Decimal Equivalent of Discrete Output Data LSB (Channels 0-15)	0 to 65,535	INT16
1041	R/W	1	Logic Polarity	0 = Standard Logic (Default) 1 = Inverted Logic	0 or 1	INT16

Output channel data is written and read using a series of 20 registers starting at reference address 1000. The solid-state switches can be opened and closed by bitwise manipulation of the data in these registers. In addition, data can be written and read in blocks. When block writing, the decimal equivalent of the 20-digit value representing channel states is written to registers 1039 (LSB) and 1038 (MSB). When block reading, the decimal equivalent of the 20-digit value representing current channel states is read from registers 1036 (LSB) and 1035 (MSB).

*Example: A MAQ20-DODC20SK module with serial number 1234567-89 is installed in a system and has been assigned a Registration Number of 4. Close the switches on output channels 5, 16, 17, and 18, open the switches on all other channels, and then read back the states of the output channels using the block read decimal equivalent.*

The MAQ20-DODC20SK module with s/n 1234567-89 has an address offset of  $2000 * 4 = 8000$

Note that channels are numbered starting at zero, so the 20 output channels are CH0 – CH19. Assume the module is using the factory default Standard Logic.

Write to register address  $8000 + 1005 = 9005$  a data value of 1 to close CH5 switch  
Write to register address  $8000 + 1016 = 9016$  a data value of 1 to close CH16 switch  
Write to register address  $8000 + 1017 = 9017$  a data value of 1 to close CH17 switch  
Write to register address  $8000 + 1018 = 9018$  a data value of 1 to close CH18 switch  
Write to register addresses 9000 – 9004, 9006 – 9015, and 9019 a value of 0 to open the switches

The data in registers 1000 – 1019, MSB in register 1019 to LSB in register 1000, is now:

xxxx xxxx xxxx 0111 0000 0000 0010 0000

Read from register address  $8000 + 1036 = 9036$  the decimal equivalent of switch states for CH0 through CH15. The value returned will be 32 (0000 0000 0010 0000).

Read from register address  $8000 + 1035 = 9035$  the decimal equivalent of relay states for CH16 through CH19. The value returned will be 7 (xxxx xxxx xxxx 0111).

## 11.0 Setting Default Outputs

The 20 output channels in the MAQ20-DODC20SK module have user configurable default output states which are set upon power up, Standard Reset, and Reset-to-Default. These are used to put a system or application in a known safe state at standard startup or by using the reset commands.

Default Output channel data is written and read using a series of 20 registers. Registers starting at reference address 110 store default relay states upon module power up and upon issuing reset commands. Default Output states can be set by bitwise manipulation of the data in these registers or read bitwise from the registers. In addition, data can be written and read in blocks. When block writing or reading, the decimal equivalent of the 20-digit value representing channel states is written to or read from registers 109 (LSB) and 108 (MSB).

**FOR STANDARD LOGIC, WRITING A 0 TO A DISCRETE OUTPUT CHANNEL OPENS THE SOLID-STATE SWITCH AND WRITING A 1 CLOSSES THE SWITCH.**

**FOR INVERTED LOGIC, WRITING A 0 TO A DISCRETE OUTPUT CHANNEL CLOSSES THE SOLID-STATE SWITCH AND WRITING A 1 OPENS THE SWITCH.**

The [MAQ20-DODC20SK Address Map](#) is found at the end of this manual. An excerpt from the Address Map is shown below.

### NOTE:

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to [Section 9.0](#) for further details on Registration Number.

Address Range 100 - 699: Module Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
108	R/W	1	Default Output States, Block Read/Write, MSB	Decimal Equivalent of Discrete Default Output States Data MSB (Channels 16-19)	0 to 15	INT16
109	R/W	1	Default Output States, Block Read/Write, LSB	Decimal Equivalent of Discrete Default Output States Data LSB (Channels 0-15)	0 to 65,535	INT16
110	R/W	20	Default Output Configuration	Discrete Output Default State. Default = 1.	DO0 - DO19 Standard Logic 0 = Switch Open 1 = Switch Closed  DO0 - DO19 Inverted Logic 0 = Switch Closed 1 = Switch Open	INT16
190	W	1	Save to EEPROM	0 = Save Default Out, Logic Polarity	0	INT16

*Example: A MAQ20-DODC20SK module with serial number 1234567-89 is installed in a system and has been assigned a Registration Number of 4.*

*Set the Default Output state on power up for channel 0, 1, and 2 switches to closed and for channel 3, 4, and 5 switches to open using bitwise data manipulation.*

The MAQ20-DODC20SK module with s/n 1234567-89 has an address offset of  $2000 * 4 = 8000$

Note that channels are numbered starting at zero, so the 20 output channels are CH0 – CH19. Assume the module is using the factory default Standard Logic.

- 1.) Write to register address  $8000 + 110 = 8110$  a data value of 1 to set CH0 default state to closed
- 2.) Write to register address  $8000 + 111 = 8111$  a data value of 1 to set CH1 default state to closed
- 3.) Write to register address  $8000 + 112 = 8112$  a data value of 1 to set CH2 default state to closed
  
- 4.) Write to register address  $8000 + 123 = 8123$  a data value of 0 to set CH13 default state to open
- 5.) Write to register address  $8000 + 124 = 8124$  a data value of 0 to set CH14 default state to open
- 6.) Write to register address  $8000 + 125 = 8125$  a data value of 0 to set CH15 default state to open

*Example:* A MAQ20-DODC20SK module with serial number 1234567-89 is installed in a system and has been assigned a Registration Number of 4.

Set the Default Output state on power up for channel 0 through channel 9 switches to closed and for channel 10 through channel 19 switches to open using block write.

The MAQ20-DODC20SK module with s/n 1234567-89 has an address offset of  $2000 * 4 = 8000$

Note that channels are numbered starting at zero, so the 20 output channels are CH0 – CH19. Assume the module is using the factory default Standard Logic.

The desired data in registers 110 – 129, MSB in register 129 to LSB in register 110, is:

xxxx xxxx xxxx 0000 0000 0011 1111 1111

Write to register address  $8000 + 109 = 8109$  the decimal equivalent of signed 16-bit data for CH0 – CH15 relay states. This is the LSB of the 32-bit channel data and the value is 1023.

Write to register address  $8000 + 108 = 8108$  the decimal equivalent of signed 16-bit data for CH16 – CH19 relay states. This is the MSB of the 32-bit channel data and the value is 0.

## 12.0 Reset Functions

Two types of firmware reset are supported in the MAQ20 I/O modules:

**Standard Reset** is used to put the module in a user-defined state. The parameters listed below will be set to the last state saved to EEPROM. Parameters stored in EEPROM are not affected.

**Reset-to-Default** reverts the module to the settings used at the factory during manufacture. It performs the standard reset actions plus resets most non-volatile parameters to default settings. Parameters stored in EEPROM are not affected.

Refer to the [MAQ20-DODC20SK Address Map](#) for further details on what parameters are affected by resets and what default values are.

**Table 2: Parameters Affected by Standard Reset and Reset-to-Default**

RESET TYPE	PARAMETERS
Standard Reset	Sets Discrete Output Channel states to user defined Default states. Sets Logic Polarity to user defined state. Clears all Status and Diagnostic registers.
Reset-to-Default	All parameters listed under Standard Reset, plus: Sets Discrete Output Channel states to 1 (switch closed) Sets Discrete Output Channel Default states to 1 (switch closed) Sets Logic Polarity to 0 (Standard)

### Reset Registers

Writing a valid data value to the Reset Register will force the module to perform a specified reset. Write 0 to perform Standard Reset or write 255 to perform Reset-to-Default.

#### NOTE:

The MAQ20 I/O modules send a response to the reset register write before carrying out the reset. This means the module will be unresponsive to commands for approximately 3 seconds.

### Power-On-Reset (POR) and Brownout

MAQ20 I/O modules utilize a brown-out detect circuit and watchdog timer to ensure reliable and predictable operation under all conditions. Upon power cycle, brown-out detect or any extreme circumstance under which the watchdog timer expires, a Standard Reset is performed, and parameters stored in EEPROM are loaded to the appropriate registers.

### 13.0 Module Identification and Status Registers

Module identification including model number, serial number, date code and firmware revision are stored in registers at addresses 0 – 41.

I/O modules in a system are identified in general by their model number (MAQ20-DIOH, MAQ20-VDN, etc.) and uniquely by their Serial Number printed on the side label (1234567-89). When I/O modules are installed in the system, only a general identifier is visible on the front of the module (DODC, V, etc.). Wire tags or additional labeling applied to the module terminal block may be used for visible unique identification in an installed system. Additionally, the system has a utility to provide a visual indication of module response for identification. Any write to address 98 plus the offset based on the Registration Number will blink the STATUS LED on the top angled surface of the module at a 5Hz rate for 5 seconds.

For troubleshooting purposes, reset status, communications errors, and invalid data written to a module are monitored and made available to the user. Diagnostic registers at addresses 1900 – 1910 hold this information.

### 14.0 LED Indicators

A set of 5 LEDs on the top panel of the MAQ20 I/O modules indicate module power, operation, communication, and alarm status.



Figure 8: MAQ®20 Faceplate



**LED Function and Troubleshooting Tips:****PWR**

Normal operation: BLUE, solid lit

LED Off: Abnormal power situation

- Verify that a MAQ20-COMx is present in the system.
- Verify that the MAQ20-COMx module has 7-34VDC power connected and turned on.
- Determine if the module is communicating by observing the TX and RX LEDs.

**STAT**

Normal operation: GREEN, 1 Hz blinking

Module Detect: A write to the Module Detect Register will force this LED to blink at 5Hz rate for 5 seconds so the module location in a system can be visually identified. Referring to the Address Map, this register is at address 98 offset from the module base address.

LED Constant On or Constant Off: Abnormal operation

- Remove and reinstall module to force a reset.
- Remove and reinstall module into another backbone position.
- Determine if the module is communicating by observing the TX and RX LEDs

**RX, TX**

Normal Operation – YELLOW, rapid blinking during communication with MAQ20-COMx module

LED Constant Off: Abnormal operation or no communications to MAQ20-COMx module

- Verify communications by sending a request for data.
- Verify that the PWR and STAT LED indicate normal operation.
- Verify that there is only one MAQ20-COMx module installed in the system.

**ALM**

Normal operation: Off

Alarm Condition Detected: RED, solid lit

- One or more alarms have been tripped.
- Read Alarm Registers based on Alarm Configuration to determine system status

The following troubleshooting tips can be used to further diagnose and fix system problems:

- Remove and reinstall MAQ20 I/O module and/or MAQ20-COMx module to verify proper insertion into Backbone.
- Remove and reinstall MAQ20 I/O module into another backbone position.
- If a Backbone extension cable is used, ensure that the connections are made correctly.

## 15.0 Specifications

<b>MAQ20-DODC20SK DISCRETE OUTPUT MODULE</b>		Typical at Ta = +25°C and +24V system power
<b>Model Number</b> MAQ20-DODC20SK	10 to 60VDC Output @ 3A max per channel	
<b>Number of Channels</b>	20	
<b>Output Configuration</b>	Open Drain MOSFET	
<b>Switching Characteristics</b> Turn-On / Turn-Off Time	1ms / 1ms	
<b>Output Load (Combined load, all channels)</b> Ta = 25°C Ta = 85°C	30A 10A	
<b>Output Protection</b> Continuous Transient	60VDC max ANSI/IEEE C37.90.1	
<b>CMV</b> Channel-to-Bus Channel-to-Channel Transient	1500Vrms, 1 min 150Vrms, 212Vpeak ANSI/IEEE C37.90.1	
<b>Output Functions</b> Logic Selection Block Write Default Relay State on Power Up	Standard / Inverted 20 Channel User Configurable	
<b>Update Rate</b>	1300 Ch/s net, 65 Ch/s @ 20-Ch Simultaneous	
<b>Power Supply Current</b>	30mA	
<b>Dimensions (h)(w)(d)</b>	4.51" x 0.60" x 3.26" (114.6mm x 15.3mm x 82.8mm)	
<b>Environmental</b> Operating Temperature Storage Temperature Relative Humidity	-40°C to +85°C -40°C to +85°C 0 to 95%, non-condensing	
<b>Emissions, EN61000-6-4</b> Radiated, Conducted	ISM Group 1 Class A	
<b>Immunity EN61000-6-2</b> RF ESD, EFT	ISM Group 1 Performance A +/- 0.5% Span Error Performance B	
<b>Certifications</b>	Heavy Industrial CE UL/cUL (Class I, Div 2, Groups A, B, C, D) file E232858 ATEX Pending	

## 16.0 MAQ20-DODC20SK Address Map

The table in this section outlines the MAQ20-DODC20SK address space. Data in these registers contains all permanent and user settable information for module configuration, status, operation of all functions, data read/write, and data storage. Table columns list the following information:

**Start Address:** Start address for the specified quantity of addresses. The start address is offset by  $2000 * R$  where R is the module Registration Number.

**Read/Write:** Indicates whether data at the address is Read, Write or both.

**Number of Registers:** The number of 16-bit registers reserved for the specified contents.

**Contents:** Parameter stored at the specified address.

**Description:** Details, examples, limits, and default values for the parameter stored at the specified address.

**Data Range:** Valid data read from or written to an address range. Data not in this range which is written to an address may return a Modus Exception 3, Illegal Data, or may be ignored.

**Data Type:** The type of data stored at the specified address.

**ASCII** 0123456789ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz, -, " "

**INT16** 16-bit integer value, 0 to 65535, unless otherwise indicated. Stored at a single address.

**INT32** 32-bit integer value, 0 to 4294967295, unless otherwise indicated. Stored at two 16-bit addresses. MSB is stored at address N, LSB is stored at address N+1.

### NOTE:

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to [Section 9.0](#) for further details on Registration Number.

**Table 4: MAQ20-DODC20SK Address Map**

Address Range 0 - 99: Module Information						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
0	R	15	Device Description	MAQ20-DODC20SK	Characters, Numbers, "-" and Space	ASCII
19	R	11	Serial Number	S1234567-89	Characters, Numbers, "-" and Space	ASCII
30	R	5	Date Code	D0317 (D<month><year>)	Characters, Numbers	ASCII
35	R	5	Firmware Rev	Fx.xx	Characters, Numbers and "."	ASCII
40	R	1	Input Channels	0 Input Channels	0	ASCII
41	R	1	Output Channels	20 Output Channels	20	ASCII
98	W	1	Module Detect	Any write will blink Status LED at 5Hz for 5 seconds	0 to 65,535	INT16
99	W	1	Reset Register	0 = Standard Reset 255 = Reset to Default	0, 255	INT16

Address Range 100 - 699: Module Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
108	R/W	1	Default Output States, Block Read/Write, MSB	Decimal Equivalent of Discrete Default Output States Data MSB (Channels 16-19)	0 to 15	INT16
109	R/W	1	Default Output States, Block Read/Write, LSB	Decimal Equivalent of Discrete Default Output States Data LSB (Channels 0-15)	0 to 65,535	INT16
110	R/W	20	Default Output Configuration	Discrete Output Default State. Default = 1.	DO0 - DO19 Standard Logic 0 = Switch Open 1 = Switch Closed  DO0 - DO19 Inverted Logic 0 = Switch Closed 1 = Switch Open	INT16
190	W	1	Save to EEPROM	0 = Save Default Out, Logic Polarity	0	INT16

Address Range 1000 - 1299: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1000	R/W	20	Discrete Output States, Binary Representation , Addr 1000 = LSB, Addr 1019 = MSB	Discrete Output States. Standard or Inverted Logic as defined in Register 1041.	DO0 - DO19 Standard Logic 0 = Switch Open 1 = Switch Closed  DO0 - DO19 Inverted Logic 0 = Switch Closed 1 = Switch Open	INT16
1035	R	1	Discrete Output States, Block Read, MSB	Decimal Equivalent of Discrete Output Data MSB (Channels 16-19)	0 to 15	INT16
1036	R	1	Discrete Output States, Block Read, LSB	Decimal Equivalent of Discrete Output Data LSB (Channels 0-15)	0 to 65,535	INT16
1037	R	1	Read	Reserved for Future	TBD	INT16
1038	W	1	Discrete Output States, Block Write, MSB	Decimal Equivalent of Discrete Output Data MSB (Channels 16-19)	0 to 15	INT16
1039	W	1	Discrete Output States, Block Write, LSB	Decimal Equivalent of Discrete Output Data LSB (Channels 0-15)	0 to 65,535	INT16
1040	W	1	Write	Reserved for Future	TBD	INT16
1041	R/W	1	Logic Polarity	0 = Standard Logic (Default) 1 = Inverted Logic	0 or 1	INT16

Address Range 1900 - 1999: Status Registers						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1900	R/W	1	Watchdog Reset	0 = Normal 1 = Watchdog Reset	0 or 1	INT16
1901	R/W	1	Brownout Flag	0 = Normal 1 = Brownout Reset	0 or 1	INT16
1902	R/W	1	I2C Error	I2C TX Error Counter	0 to 65,535	INT16
1903	R/W	1	I2C Error	I2C RX Error Counter	0 to 65,535	INT16
1906	R/W	1	Numeric Error	Increments when a value received is outside of the allowed range	0 to 65,535	INT16
1908	R/W	1	UART RX Error	UART RX Error Counter. Command Too Short	0 to 65,535	INT16
1909	R/W	1	UART RX Error	UART RX Error Counter. Command Too Long	0 to 65,535	INT16
1910	R/W	1	UART RX Error	UART RX Error Counter. Command received in invalid state	0 to 65,535	INT16

## DATAFORTH WARRANTY

To view the current Dataforth Corporation Warranty, please click on the link below for the Dataforth Standard Terms and Conditions of Sale Applying to Products Sold by Dataforth Corporation. The Warranty in its entirety is Section 3. Please check this link periodically for updates.

<https://www.dataforth.com/terms-and-conditions-sale>

## APPLICATION SUPPORT

Dataforth provides timely, high-quality product support. Send an email to [support@dataforth.com](mailto:support@dataforth.com) or call **+1-800-444-7644 TOLL-FREE**.

### Returns/Repair Policy

All warranty and repair requests should be directed to the Dataforth Customer Service Department at +1-520-741-1404 or **+1-800-444-7644 TOLL-FREE**.

If a product return is required, submit a Return Material Authorization (RMA) request by visiting <https://www.dataforth.com>.

The information provided herein is believed to be reliable; however, DATAFORTH assumes no responsibility for inaccuracies or omissions. DATAFORTH assumes no responsibility for the use of this information, and all use of such information shall be entirely at the user's own risk. Application information is intended as suggestions for possible use of the products and not as explicit performance in a specific application. Prices and specifications are subject to change without notice. No patent rights or licenses to any of the circuits described herein are implied or granted to any third party. DATAFORTH does not authorize or warrant any DATAFORTH product for use in life support devices and/or systems.