



**MAQ20-MVDN/-VDN/-VSN/-IDN/-ISN Hardware User Manual**

**MA1041 Rev. C – March 2024**

**© 1984 – 2024 Dataforth Corporation. All Rights Reserved.**

**[ISO9001:2015-Registered QMS](#)**

The information in this manual has been checked carefully and is believed to be accurate; however, Dataforth assumes no responsibility for possible inaccuracies or omissions. Specifications are subject to change without notice.

The information, tables, diagrams, and photographs contained herein are the property of Dataforth Corporation. No part of this manual may be reproduced or distributed by any means, electronic, mechanical, or otherwise, for any purpose other than the purchaser's personal use, without the express written consent of Dataforth Corporation.

MAQ<sup>®</sup>20 is a registered trademark of Dataforth Corporation.

ReDAQ<sup>®</sup> is a registered trademark of Dataforth Corporation

Modbus<sup>®</sup> is a registered trademark of the Modbus Organization, Inc.

LabVIEW<sup>™</sup> is a trademark of National Instruments Corporation

## Table of Contents

1.0	System Features .....	1
2.0	System Description and Documentation .....	2
3.0	Unpacking .....	4
4.0	Module Dimensions and Input Connections .....	4
5.0	Installation .....	5
6.0	Building a System .....	7
7.0	Maintaining a System .....	8
8.0	Expanding a System .....	9
9.0	MAQ®20 I/O Module Registration .....	10
10.0	Range Selection and Channel Enable .....	14
11.0	Alarm Functions .....	16
12.0	Setting and Monitoring Alarms .....	18
13.0	Signal Averaging .....	20
14.0	Reset Functions .....	21
15.0	Module Identification and Status Registers .....	22
16.0	LED Indicators .....	23
17.0	Specifications .....	25
18.0	MAQ20-MVDN and MAQ20-VDN Address Map and Range Table .....	26
19.0	MAQ20-VSN Address Map and Range Table .....	34
20.0	MAQ20-IDN Address Map and Range Table .....	41
21.0	MAQ20-ISN Address Map and Range Table .....	45

## About Dataforth Corporation

“Our passion at Dataforth Corporation is designing, manufacturing, and marketing the best possible signal conditioning, data acquisition, and data communication products. Our mission is to set new standards of product quality, performance, and customer service.” Dataforth Corporation, with more than a quarter century of experience, is the worldwide leader in Instrument Class® Industrial Electronics – rugged, high performance signal conditioning, data acquisition, and data communication products that play a vital role in maintaining the integrity of industrial automation, data acquisition, and quality assurance systems. Our products directly connect to most industrial sensors and protect valuable measurement and control signals and equipment from the dangerous and degrading effects of noise, transient power surges, internal ground loops, and other hazards present in industrial environments.

Dataforth spans the globe with more than 50 International Distributors and US Representative Companies. Our customers benefit from a team of over 130 salespeople highly trained in the application of precision products for industrial markets. In addition, we have a team of application engineers in our Tucson factory ready to solve any in-depth application questions. Upon receipt of an RFQ or order, our Customer Service Department provides fast one-day delivery information turnaround. We maintain an ample inventory that allows small quantity orders to be shipped from stock.

Dataforth operates under an [ISO9001:2015](#) quality management system.

## Contacting Dataforth Corporation

Contact Method	Contact Information
<b>E-Mail:</b> Technical Support	<a href="mailto:support@dataforth.com">support@dataforth.com</a>
<b>Website:</b>	<a href="http://www.dataforth.com">www.dataforth.com</a>
<b>Phone:</b>	+1-520-741-1404 and toll free +1-800-444-7644
<b>Fax:</b>	+1-520-741-0762
<b>Mail:</b>	Dataforth Corporation 3331 E. Hemisphere Loop Tucson, AZ 85706 USA

## Errata Sheets

Refer to the Technical Support area of Dataforth's website ([www.dataforth.com](http://www.dataforth.com)) for any errata information on this product.

## 1.0 System Features

The MAQ®20 Data Acquisition System encompasses more than 25 years of design excellence in the process control industry. It is a family of high performance, DIN rail mounted, programmable, multi-channel, industrially rugged signal conditioning I/O and communications modules.

### Instrument Class Performance

- $\pm 0.035\%$  Accuracy
- Industry leading  $\pm 0.3^\circ\text{C}$  CJC Accuracy over full operating temperature range
- Ultra-low Zero and Span Tempco
- Over-range on one channel does not affect other channels
- 1500Vrms Channel-to-Bus Isolation
- 240Vrms Continuous Field I/O Protection
- ANSI/IEEE C37.90.1 Transient Protection
- Ventilated Communications and I/O Modules
- Industrial Operating Temperature of  $-40^\circ\text{C}$  to  $+85^\circ\text{C}$
- Wide Power Supply Range of 7-34VDC
- CE Compliant
- UL/cUL (Class I, Div 2, Groups A, B, C, D) Compliant, file E232858
- ATEX Compliance pending

### Industry Leading Functionality

- The system is a Modbus Server and can be operated remotely with no local PC
- Up to 4GB of logged data can be transferred via FTP during real-time acquisition
- Up to 24 I/O modules, or 384 channels, per system, per 19" rack width
- Per-channel configurable for range, alarms, and other functions
- Backbone mounts within DIN rail and distributes power and communications
- System firmware automatically registers the installation and removal of I/O modules
- I/O modules can be mounted remotely from the Communications Module
- Equal load sharing power supply modules allow for system expansion
- Hot Swappable I/O modules with Field-side pluggable terminal blocks on most models
- Sophisticated package enables high density mounting in 3U increments
- DIN Rail can be mounted on a continuous flat panel or plate

### **Distributed Processing Enables Even More Functionality**

- Output modules are programmable for user-defined waveforms
- Discrete I/O modules have seven high level functions:
  - Pulse Counter
  - Frequency Counter
  - Waveform Measurement
  - Time Between Events
  - Frequency Generator
  - PWM Generator
  - One-Shot Pulse Generator

### **Multiple Software Options**

- Free Configuration Software
  - ReDAQ Shape Graphical HMI Design & Runtime Solution
- Intuitive Graphical Control Software
  - ReDAQ Shape Graphical HMI Design & Runtime Solution
  - Phyton API
  - OPC Server
  - Programming examples and LabVIEW Vis

## **2.0 System Description and Documentation**

A MAQ®20 Data Acquisition System must have as a minimum a Communications Module, a Backbone, and one I/O Module. Examples include but are not limited to:

- MAQ20-COMx Communications Module with Ethernet, USB and RS-232 or RS-485 Interface
- MAQ20-DIOx Discrete Input / Output Module
- MAQ20-xTC Type x Thermocouple Input Module
- MAQ20-mVxN, -VxN Voltage Input Module
- MAQ20-IxN Process Current Input Module
- MAQ20-IO, -VO Process Current Output and Process Voltage Output Module
- MAQ20-BKPLx x Channel System Backbone

Refer to <https://www.dataforth.com/maq20> for a complete listing of available modules and accessories.

System power is connected to the Communications Module, which in turn powers the I/O modules. For systems with power supply requirements exceeding what the Communications Module can provide, the MAQ20-PWR3 Power Supply module is used to provide additional power. When a MAQ®20 I/O module is inserted into a system, module registration occurs automatically, data acquisition starts, and data is stored locally in the module. The system is based on a Modbus compatible memory map for easy access to acquired data, configuration settings and alarm limits. Information is stored in consistent locations from module to module for ease of use and system design.

MAQ®20 modules are designed for installation in Class I, Division 2 hazardous locations and have a high level of immunity to environmental noise commonly present in heavy industrial environments.

The MAQ®20 voltage and current input modules offer 8 or 16 input channels. All channels are individually configurable for range, alarm limits, and averaging to match the most demanding applications. High, Low, High-High and Low-Low alarms provide essential monitoring and warning functions to ensure optimum process flow and fail-safe applications. Hardware low-pass filtering in each channel provides rejection of 50 and 60 Hz line frequencies. Field I/O connections are made through a pluggable terminal block with 4 positions provided for the termination of wiring shields.

Input-to-Bus isolation is a robust 1500Vrms and each individual channel is protected up to 240Vrms continuous overload in the case of inadvertent wiring errors. Overloaded channels do not adversely affect other channels in the module which preserves data integrity.

For details on installation, configuration, and system operation, refer to the manuals and software available for download from [www.dataforth.com](http://www.dataforth.com). This includes, but is not limited to:

MA1036 MAQ®20 Quick Start Guide

MA1040 MAQ®20 Communications Module Hardware User Manual

MA1041 MAQ®20 milliVolt, Volt, and Current Input Module Hardware User Manual

MA1037 MAQ®20 Configuration Software Tool User Manual

MA1038 MAQ®20 ReDAQ Shape for MAQ®20 User Manual

MAQ20-940 ReDAQ Shape Software for MAQ®20 – Developer Version

MAQ20-941 ReDAQ Shape Software for MAQ®20 – User Version

MAQ20-945 MAQ®20 Configuration Software Tool

MAQ20-952 IPEMotion Software for MAQ®20

### 3.0 Unpacking

Each MAQ®20 Data Acquisition System component is shipped in electro-static discharge (ESD) protective packaging. Use appropriate ESD protection measures while unpacking. Check visually for physical damage. If physical damage is noted, file a claim with the shipping carrier.

### 4.0 Module Dimensions and Input Connections

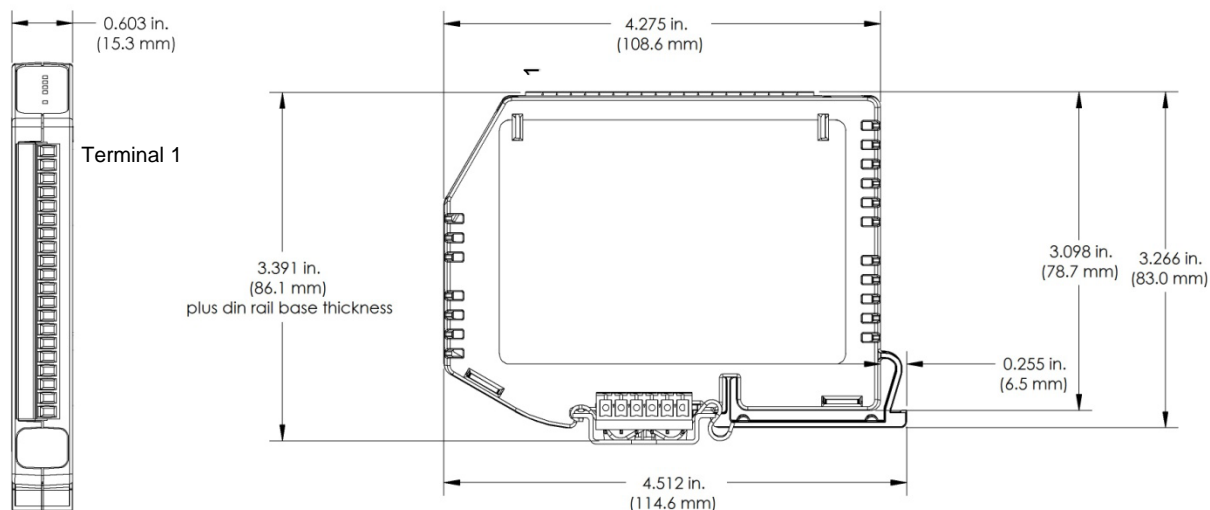


Figure 1: Module Dimensions

Table 1: Millivolt and Volt Input Module Input Terminal Block Connections

TERMINAL BLOCK POSITION (TOP TO BOTTOM)	MAQ20-MVDN and MAQ20-VDN INPUT CONNECTIONS	MAQ20-VSN INPUT CONNECTIONS
1	CH0 +IN	CH0 +IN
2	CH0 -IN	CH1 +IN
3	SHIELD	CH0, CH1, CH2, CH3 -IN, SHIELD
4	CH1 +IN	CH2 +IN
5	CH1 -IN	CH3 +IN
6	CH2 +IN	CH4 +IN
7	CH2 -IN	CH5 +IN
8	SHIELD	CH4, CH5, CH6, CH7 -IN, SHIELD
9	CH3 +IN	CH6 +IN
10	CH3 -IN	CH7 +IN
11	CH4 +IN	CH8 +IN
12	CH4 -IN	CH9 +IN
13	SHIELD	CH8, CH9, CH10, CH11 -IN, SHIELD
14	CH5 +IN	CH10 +IN
15	CH5 -IN	CH11 +IN
16	CH6 +IN	CH12 +IN
17	CH6 -IN	CH13 +IN
18	SHIELD	CH12, CH13, CH14, CH15 -IN, SHIELD
19	CH7 +IN	CH14 +IN
20	CH7 -IN	CH15 +IN



The shield terminals are connected to the Field Side common and are isolated from the Bus. If shield drain to system ground is required, this connection must be made external to the module.

**Table 2: Current Input Module Input Terminal Block Connections**

TERMINAL BLOCK POSITION (TOP TO BOTTOM)	MAQ20-IDN INPUT CONNECTIONS	MAQ20-ISN INPUT CONNECTIONS
1	CH0 +IN	CH0 +IN
2	CH0 -IN	CH1 +IN
3	SHIELD	CH0, CH1, CH2, CH3 -IN, SHIELD
4	CH1 +IN	CH2 +IN
5	CH1 -IN	CH3 +IN
6	CH2 +IN	CH4 +IN
7	CH2 -IN	CH5 +IN
8	SHIELD	CH4, CH5, CH6, CH7 -IN, SHIELD
9	CH3 +IN	CH6 +IN
10	CH3 -IN	CH7 +IN
11	CH4 +IN	CH8 +IN
12	CH4 -IN	CH9 +IN
13	SHIELD	CH8, CH9, CH10, CH11 -IN, SHIELD
14	CH5 +IN	CH10 +IN
15	CH5 -IN	CH11 +IN
16	CH6 +IN	CH12 +IN
17	CH6 -IN	CH13 +IN
18	SHIELD	CH12, CH13, CH14, CH15 -IN, SHIELD
19	CH7 +IN	CH14 +IN
20	CH7 -IN	CH15 +IN

The shield terminals are connected to the Field Side common and are isolated from the Bus. If shield drain to system ground is required, this connection must be made external to the module.


## 5.0 Installation

The MAQ®20 I/O module package has been designed for easy insertion into and removal from a system and can mate with DIN rails mounted flush on continuous panels or plates.

To install a module:


1. Orient the module with the field connector facing out.
2. Align the angled surface on the top rear corner with panel or plate the DIN rail is mounted to.
3. Slide the module down to capture the DIN rail with the hook on the module.
4. Rotate the module and snap in place.

To remove a module, reverse the steps in the installation process. If space is available, the clip at the bottom of the module can be squeezed by hand to release. For tight installations, insert a flat blade screwdriver into the recess in the clip (5), place the shaft of the screwdriver against the curved part of the clip and gently pry the clip to release (6).

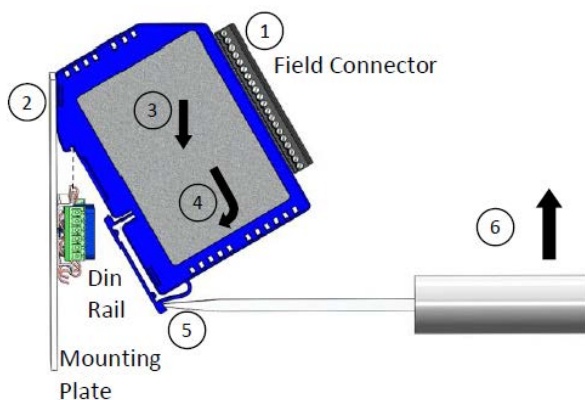

**Figure 2: Installation and Removal**

Multiple rows of MAQ<sup>®</sup>20 modules can be mounted at a 3U vertical spacing interval. Backbones can be combined to add I/O modules to a system. A system is only allowed to have one MAQ20-COMx module. Some possible configurations in a 19" rack are shown.

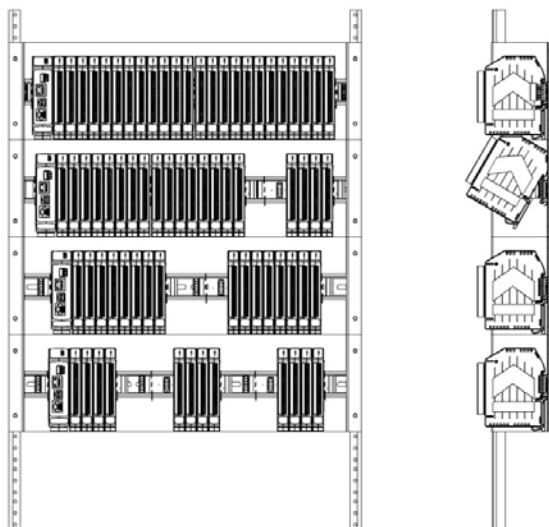

**Figure 3: Possible System Configurations**

## 6.0 Building a System

An automated I/O module registration process reduces system setup to three basic steps:

### STANDARD SETUP PROCESS

- 1.) Install a MAQ20-BKPLx backbone in a DIN rail then insert a MAQ20-COMx module in the left-most position and apply power.
- 2.) Install any MAQ®20 I/O Module in any vacant local or remote backbone position. Observe that the green Power LED is on and communications activity is seen on the TX and RX LEDs. Allow 1 second for registration. This module has now been assigned Registration Number 1.

Label and connect field wiring to the I/O Module. If desired, record module physical position in the system.

- 3.) Repeat Step 2 for all remaining MAQ®20 I/O modules in the system. Subsequent modules installed are assigned Registration Number 2, 3, etc. The Registration Number sequence matches the physical sequence of module installation.

### ALTERNATE SETUP PROCESS

- 1.) Do not apply power. Install a MAQ20-BKPLx backbone in a DIN rail then insert a MAQ20-COMx module in the left-most position and install all required MAQ®20 I/O modules in any vacant local or remote backbone position. Label and connect field wiring to the I/O Module and if desired record physical position in the system.
- 2.) Apply system power and observe that each module has the green Power LED on and communications activity is seen on the TX and RX LEDs. Allow 5 seconds for full system registration. All modules have now been assigned Registration Numbers, but in a random sequence not associated with the physical position on the backbone.

### NOTES:

Once the registration process is complete, Registration Numbers are permanent as long as I/O modules are not removed from or added to a system. When system power is cycled or the system is reset, I/O module Registration Numbers will always remain the same.

I/O modules in a system are identified in general by their model number (MAQ20-VDN, MAQ20-JTC, etc.) and uniquely by their Serial Number printed on the side label (i.e. 1234567-89). When I/O modules are installed in the system, only a general identifier is visible on the front of the module (V, I, TCPL, etc.). Wire tags or additional labeling applied to the module terminal block may be used for visible unique identification in an installed system.

MAQ20-940 - ReDAQ Shape Software for MAQ®20 automatically assigns tag names to each input and output channel. These can be changed by the customer to associate channels with input wiring or parameters measured and controlled.

The system does not identify I/O modules by physical position on a backbone, only by registration sequence.

MAQ20-940 - ReDAQ Shape Software for MAQ®20 and MAQ20-945 - MAQ®20 Configuration Software Tool

provided by Dataforth show a graphical representation of a system based on registration sequence and not by physical position. Tools within each software package allow the user to reassign Registration Numbers thereby making graphical representations match physical location for a single, local backbone. For further details, see Section 9.0.

Module Detect: A write to the Module Detect Register at I/O module address 98 plus the module offset based on Registration Number will blink the STAT LED on the top angled surface of the module at a 5Hz rate for 5 seconds so the module location in a system can be visually identified.

## 7.0 Maintaining a System

The MAQ20-COMx Communications Module periodically scans the system and will detect if a MAQ®20 I/O module has been removed from the system or has lost communications. When this happens the module Registration Number will be released and available for reassignment.

Standard system maintenance involves a simple three step process:

### STANDARD MAINTENANCE PROCESS

- 1.) Turn system power on and observe communications activity on the I/O modules.
- 2.) **CASE 1:** I/O module is suspected faulty and is to be replaced with the same model number: Remove a single MAQ®20 I/O module from any local or remote backbone position. Replace the module with another of the same model number. This module can be installed in any vacant local or remote backbone position. Observe that the green Power LED is on and communications activity is seen on the TX and RX LEDs. Allow 1 second for registration. This module now has the same Registration Number as the one removed.

**CASE 2:** I/O module is to be replaced with another having a different model number: Remove a single MAQ®20 I/O module from any local or remote backbone position. Replace the module with another having a different model number. This module can be installed in any vacant local or remote backbone position. Observe that the green Power LED is on and that there is communications activity on the TX and RX LEDs. Allow 1 second for registration. This module now has the same Registration Number as the one removed.

Label and connect input/output wiring to the I/O module and if desired record physical position in the system.

- 3.) Repeat Step 2 for any remaining MAQ®20 I/O modules in the system requiring maintenance.

### ALTERNATE MAINTENANCE PROCESS

- 1.) With the system power off, remove any I/O modules which are to be replaced. Replace the modules with others of the same or different model numbers. Modules can be installed in any vacant local or remote backbone position.  
Label and connect input/output wiring to the I/O module and if desired record physical position in the system.

- 2.) Apply system power and observe that each module has the green Power LED on and communications activity is seen on the TX and RX LEDs. Allow 5 seconds for full system registration. Replaced modules have now been assigned the Registration Numbers of those removed, but in a random sequence not associated with the physical position on the backbone. Modules which were not replaced retain their assigned Registration Numbers.

**NOTES:**

Once the registration process is complete, Registration Numbers are permanent as long as I/O modules are not removed from or added to a system. When system power is cycled or the system is reset, I/O module Registration Numbers will always remain the same. Tools within MAQ20-940 - ReDAQ Shape Software for MAQ®20 and MAQ20-945 - MAQ®20 Configuration Software Tool allow the user to reassign Registration Numbers. For further details, see Section 9.0.

Module Detect: A write to the Module Detect Register at I/O module address 98 plus the module offset based on Registration Number will blink the STAT LED on the top angled surface of the module at a 5Hz rate for 5 seconds so the module location in a system can be visually identified.

## 8.0 Expanding a System

The MAQ20-COMx Communications Module periodically scans the system and will detect if a MAQ®20 I/O module has been added. When this happens the next available sequential Registration Number is assigned to the module.

Standard system expansion involves a simple three step process:

**STANDARD EXPANSION PROCESS**

- 1.) Turn system power on and observe communications activity on the I/O modules.
- 2.) Add a single MAQ®20 I/O module in any local or remote backbone position. Observe that the green Power LED is on and communications activity is seen on the TX and RX LEDs. Allow 1 second for registration. This module has now been assigned the next available sequential Registration Number.

Label and connect input/output wiring to the I/O module and if desired record physical position in the system.

- 3.) Repeat Step 2 for all remaining MAQ®20 I/O modules to be added to the system. Subsequent modules installed are assigned the next sequential Registration Number.

**ALTERNATE EXPANSION PROCESS**

- 1.) With system power off, install all additional MAQ®20 I/O modules in any vacant local or remote backbone positions. Label and connect field wiring to the I/O module and if desired record physical position in the system. Do not apply power.

- 2.) Apply system power and observe that each module has the green Power LED on, and communications activity is seen on the TX and RX LEDs. Allow 5 seconds for full system registration. Added modules have now been assigned the next available sequential Registration Numbers, but in a random sequence not associated with the physical position on the backbone. Modules previously installed and registered in the system retain their assigned Registration Numbers.

**NOTES:**

Once the registration process is complete Registration Numbers are permanent as long as I/O modules are not removed from or added to a system. When system power is cycled or the system is reset, I/O module Registration Numbers will always remain the same. Tools within MAQ20-940 - ReDAQ Shape Software for MAQ®20 and MAQ20-945 - MAQ®20 Configuration Software Tool allow the user to reassign Registration Numbers. For further details, see Section 9.0.

Module Detect: A write to the Module Detect Register at I/O module address 98 plus the module offset based on Registration Number will blink the STAT LED on the top angled surface of the module at a 5Hz rate for 5 seconds so the module location in a system can be visually identified.

## 9.0 MAQ®20 I/O Module Registration

The MAQ®20 Data Acquisition System uses an automated registration process which periodically scans the system and will detect when MAQ®20 I/O modules are added and removed. Modules are assigned a sequential Registration Number based on the order in which they are detected. This order can be forced to occur in a given sequence by adding modules one at a time or it can be allowed to happen randomly. For further details, see Sections 6.0, 7.0 and 8.0.

The system does not identify I/O modules by physical position on a backbone, only by registration sequence. MAQ20-940 - ReDAQ Shape Software for MAQ®20 and MAQ20-945 - MAQ®20 Configuration Software Tool provided by Dataforth show a graphical representation of a system based on registration sequence and not by physical position. Tools within each software package allow the user to reassign Registration Numbers thereby making graphical representations match physical location for a single, local backbone.

Module Detect: A write to the Module Detect Register at I/O module address 98 plus the module offset based on Registration Number will blink the STAT LED on the top angled surface of the module at a 5Hz rate for 5 seconds so the module location in a system can be visually identified.

Each module is assigned an address space of 2000 addresses based on the Registration Number and starting at address 2000. I/O module with Registration Number 1 is assigned address space 2000 – 3999, I/O module with Registration Number 2 is assigned address space 4000 – 5999 and so on. The starting address for the module is very important because this is the offset address that must be added to the addresses listed in the I/O module address map to know where data for that module is located within the system level address map. The MAQ20-COMx Communication Module is always assigned a Registration Number of 0.

Address Maps for each module are found at the end of this manual. An excerpt from the MAQ20-VSN module Address Map is shown below. Channel Data is stored starting at address 1000.

**NOTE:**

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to Section 9.0 for further details on Registration Number.

Address Range 1000 - 1699: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1000	R	16	Channel Data	Data for all 8 Channels	-4096 to 4095	INT16

*Example:* A MAQ20-VSN module with serial number 1234567-89 is installed in a system and has been assigned a Registration Number of 6. Read Current Data from Channels 0-15.


The MAQ20-VSN module with s/n 1234567-89 has an address offset of  $2000 * 6 = 12000$

Read from register addresses  $12000 + 1000$  to  $1015 = 12000$  to  $12015$  the Current Data from Channels 0-15.

The MAQ20-940 - ReDAQ Shape Software for MAQ®20 and MAQ20-945 - MAQ®20 Configuration Software Tool both have a utility which allows the user to reassign Registration Numbers to I/O Modules in a system. This can be used to rearrange the way I/O modules are displayed in the software if the Alternate Registration Processes have been used instead of the Standard Registration Processes. These are both described in Sections 6.0, 7.0 and 8.0.

Graphical representations of a system in the ReDAQ Shape and Configuration Software Tool display I/O modules sequentially in the order they were registered. The display does not represent physical position and will not show vacant positions between I/O modules. The ReDAQ Shape graphic shows a 24-position backbone regardless of the backbone or combination of backbones used in a system.

When using the Configuration Software Tool, the registration sequence is presented on the main screen as shown in Figure 4.

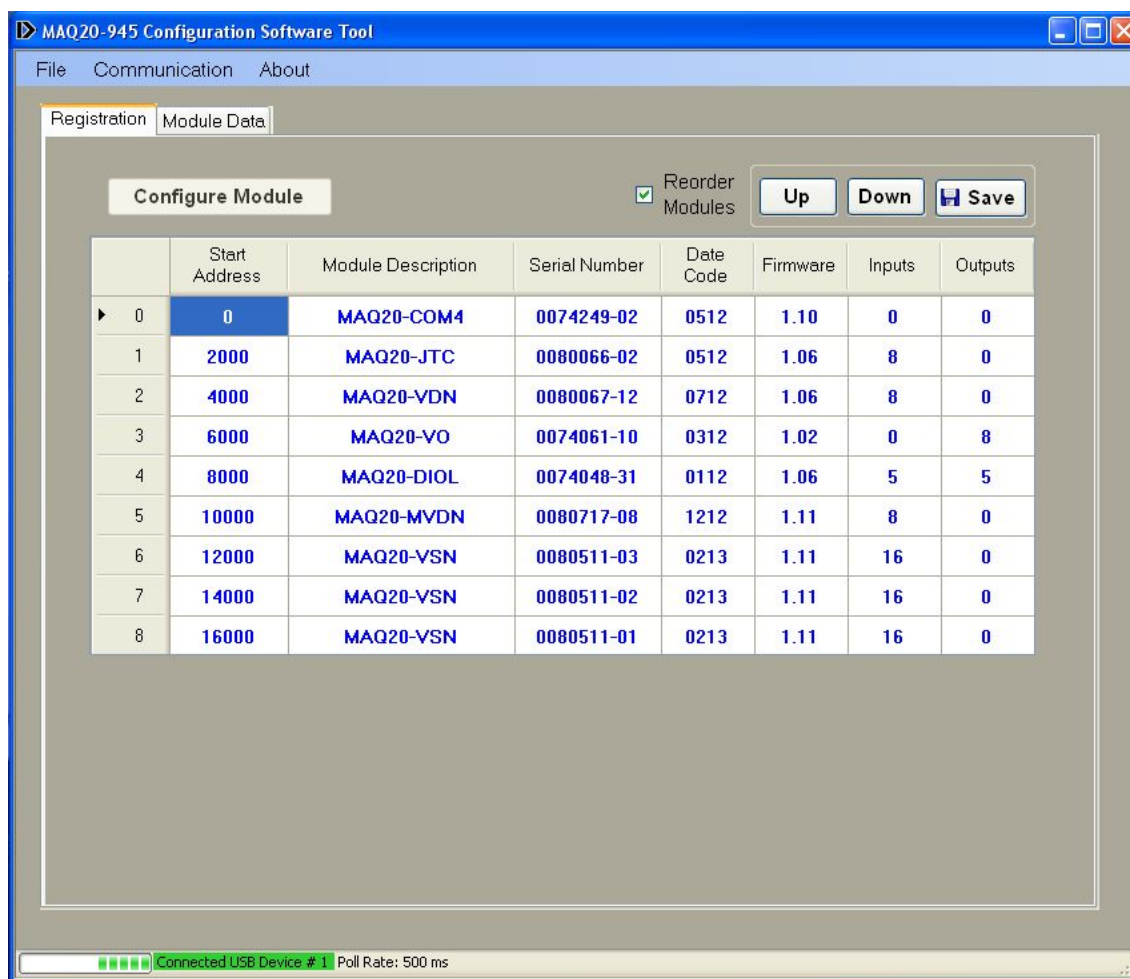


**Figure 4: Module Registration using MAQ20-945 Configuration Software Tool**

Registration Numbers are listed in the left column. To change the Registration Number of an I/O module, click the box with the Registration Number in the left column, select the 'Reorder Modules' box, then use the Up and Down buttons to move the module within the sequence. The system automatically reassigns the I/O modules above and below the one moved. Repeat for other modules if desired. The MAQ20-COMx module always has Registration Number 0 and cannot be moved. Press 'Save' to save the configuration. The new registration sequence is permanent as long as I/O modules are not removed from or added to a system.


ReDAQ Shape Software for MAQ®20 presents a graphical representation of the system on the Acquire panel as shown in Figure 5.



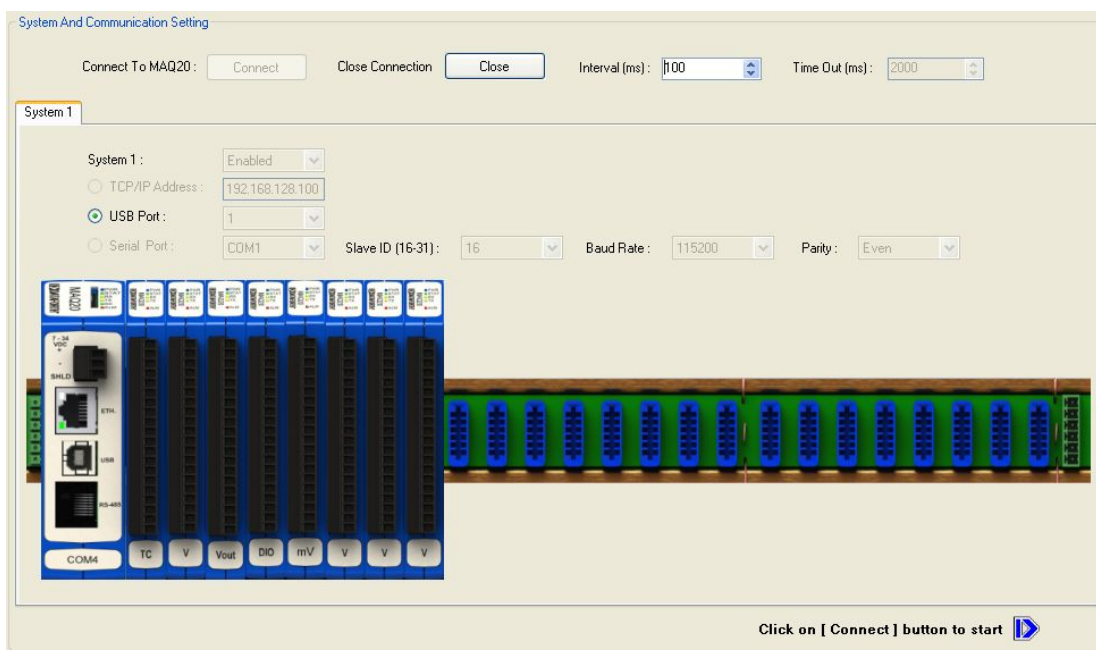

**Figure 5: MAQ20-940 ReDAQ Shape for MAQ@20 Main Configuration Screen**

To view the registration sequence, double-click on the MAQ20-COMx graphic as shown in Figure 6.

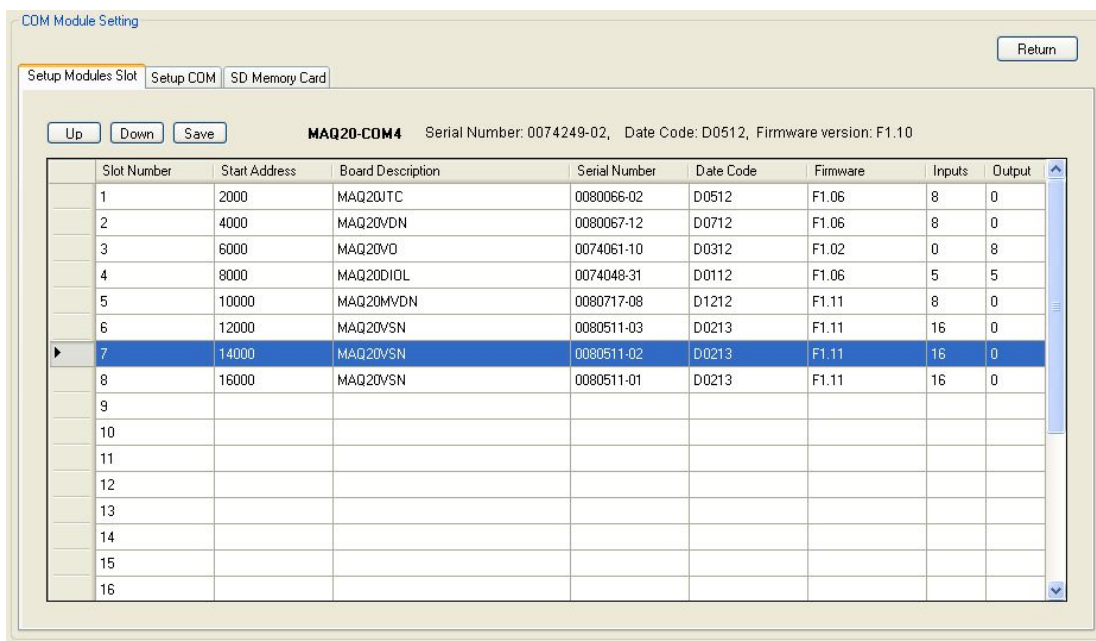

**Figure 6: Module Registration using MAQ20-940 ReDAQ Shape for MAQ@20**

Registration Numbers are listed in the left column. To change the Registration Number of an I/O module, click the box in the left column next to the Registration Number, then use the Up and Down buttons to move the module within the sequence. The system automatically reassigns the I/O modules above and below the one moved. Repeat for other modules if desired. The MAQ20-COMx module always has Registration Number 0 and cannot be moved. Press 'Save' to save the new configuration. The new registration sequence is permanent as long as I/O modules are not removed from or added to a system.

## 10.0 Range Selection and Channel Enable

The MAQ20-MVDN, -VDN and -VSN modules have five user selectable input ranges and the MAQ20-IDN and -ISN modules have two selectable input ranges. Input ranges are selectable on a per-channel basis. Over-range and Under-range up to 2% beyond the standard input values will be measured. The published accuracy is guaranteed over the standard input ranges. The Range Table following the Address Map for each module at the end of this manual shows the input ranges for each module and the input to counts mapping. The Range Table for the MAQ20-VDN module is shown below for reference.

	Range	Standard Input Voltage	Equivalent Counts	Over/Under Range	Equivalent Counts	Volts per Count
MAQ20-VDN	0	-60V to +60V	-4016 to 4016	-61.2V to +61.2V	-4096 to 4095	$14.94 \times 10^{-3}$
	1	-40V to +40V	-4016 to 4016	-40.8V to +40.8V	-4096 to 4095	$9.961 \times 10^{-3}$
	2	-20V to +20V	-4016 to 4016	-20.4V to +20.4V	-4096 to 4095	$4.980 \times 10^{-3}$
	3	-10V to +10V	-4016 to 4016	-10.2V to +10.2V	-4096 to 4095	$2.490 \times 10^{-3}$
	4	-5V to +5V (Default)	-4016 to 4016	-5.1V to +5.1V	-4096 to 4095	$1.245 \times 10^{-3}$

Address Maps for each module are found at the end of this manual. Excerpts from the MAQ20-VDN module Address Map are shown below. Input Range is stored starting at address 100, Channel Enable is stored starting at address 140, and Channel Data is stored starting at address 1000.

### NOTES:

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to Section 9.0 for further details on Registration Number.

Address Range 100 - 699: Module Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
100	R/W	8	Input Range	Range for each of 8 channels	See Table 5	INT16
140	R/W	8	Channel Enable	0 = Disable 1 = Enable (default)	0 or 1	INT16

Address Range 1000 - 1699: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1000	R	8	Channel Data	Data for each of 8 Channels	-4096 to 4095	INT16

To change the input range, write the appropriate range code to address  $100 + 2000 * R$ .

Channels in a module can be selectively enabled for scanning. By default, all channels are enabled. Non-used channels may be disabled to increase sampling rate of enabled channels. To disable a channel, write a 0 to the appropriate register starting at address  $140 + 2000 * R$ . To enable a channel, write a 1 to this register.

Once a range selection is made it can be saved to EEPROM. Standard Reset does not affect the setting in volatile memory. Reset-to-Default will clear the setting in volatile memory and reset the ranges to the default values. Settings stored to EEPROM are not affected by Standard Reset or Reset-to-Default. Module power cycle will restore range settings from EEPROM.

**Example: A MAQ20-VDN module with serial number 1234567-89 is installed in a system and has been assigned a Registration Number of 2. Set channels 0 and 1 to measure  $\pm 60V$ , channels 4 and 5 to measure  $\pm 10V$ , and disable channels 2, 3, 6 and 7. Obtain the current readings in counts and convert these to Engineering units.**

The MAQ20-VDN module with s/n 1234567-89 has an address offset of  $2000 * 2 = 4000$ .

The default module configuration is all channels enabled and all channels with range -5V to +5V. The table shows that Range 0 is -60V to +60V in and Range 3 is -10V to +10V in. Range information is also stored in registers at addresses 1700 – 1800 for user read back if desired.

- 1.) Write to register address  $4000 + 100 = 4100$  a data value of 0 to set Ch 0 input range to  $\pm 60V$
- 2.) Write to register address  $4000 + 101 = 4101$  a data value of 0 to set Ch 1 input range to  $\pm 60V$
- 3.) Write to register address  $4000 + 104 = 4104$  a data value of 3 to set Ch 4 input range to  $\pm 10V$
- 4.) Write to register address  $4000 + 105 = 4105$  a data value of 3 to set Ch 5 input range to  $\pm 10V$
  
- 5.) Write to register address  $4000 + 142 = 4142$  a data value of 0 to disable Channel 2
- 6.) Write to register address  $4000 + 143 = 4143$  a data value of 0 to disable Channel 3
- 7.) Write to register address  $4000 + 146 = 4146$  a data value of 0 to disable Channel 6
- 8.) Write to register address  $4000 + 147 = 4147$  a data value of 0 to disable Channel 7
  
- 9.) Read from register address  $4000 + 1000 = 5000$  the data from Channel 0
- 10.) Read from register address  $4000 + 1001 = 5001$  the data from Channel 1
- 11.) Read from register address  $4000 + 1004 = 5004$  the data from Channel 4
- 12.) Read from register address  $4000 + 1005 = 5005$  the data from Channel 5

If the data read from Channel 0 is 3120 counts and the data read from Channel 4 is -2133 counts, the input signals are:

$$\text{Ch 0: } \frac{3120 \text{ counts} * (61.2V - (-61.2V))}{(4095 \text{ counts} - (-4096 \text{ counts}))} = +46.62V$$

$$\text{Ch 4: } \frac{-2133 \text{ counts} * (10.2V - (-10.2V))}{(4095 \text{ counts} - (-4096 \text{ counts}))} = -5.312V$$

## 11.0 Alarm Functions

The powerful alarm functions in the MAQ®20 Data Acquisition System provide essential monitoring and warnings to ensure optimum process flow and fail-safe applications. Alarms have the following parameters which can be configured:

### Alarm Enable

Enables the Alarm on a given channel provided that the Alarm Configuration Register has a valid configuration. Set the bit corresponding to the given channel to a 1 to enable the alarm. If the Alarm Configuration register for the given channel does not have a valid value, the write will be ignored and the Alarm Enable bit will remain 0. Write a 0 to the bit corresponding to the given channel to disable the alarm and clear any alarms that have tripped.

### Alarm Configuration

Selects Tracking or Latching alarms for a given channel and selects which limits trip the alarm - High, Low, High-High or Low-Low. There is a register for each channel. The value written to this register is the sum of the codes for the Alarm Type and Alarm Limits. Reference Section 12.0 for the specific codes. If an invalid value is written to this register, the value will be ignored and the last valid value that the register contained will be kept. If a 0 is written to the register, the Alarm Enable register for the channel will be set to 0 and alarms that the channel has tripped will be cleared.

Tracking alarms follow the value of the input signal and reset automatically when the signal comes back into the valid range specified by the limit and deadband. Latching alarms trip when the signal exceeds the alarm condition and remains set until reset by the user.

### High Limit

Sets the value for the High limit in counts. Alarm status is stored in a register.

### Low Limit

Sets the value for the Low limit in counts. Alarm status is stored in a register.

### High Low Deadband

Used for the High and/or Low limits to prevent false tripping or alarm chatter for noisy signals. Deadband is the region less than the High limit or greater than the Low limit, measured in counts, which the signal must traverse through before the alarm is reset after being tripped.

### High-High Limit

Sets the value for the High-High limit in counts. Alarm status is stored in a register.


### Low-Low Limit

Sets the value for the Low-Low limit in counts. Alarm status is stored in a register.

### High-High Low-Low Deadband


Used for the High-High and/or Low-Low limits to prevent false tripping or alarm chatter for noisy signals. Deadband is the region less than the High-High limit or greater than the Low-Low limit, measured in counts, which the signal must traverse through before the alarm is reset after being tripped.

See Figure 7 below for graphical representations of alarm parameters and functionality.

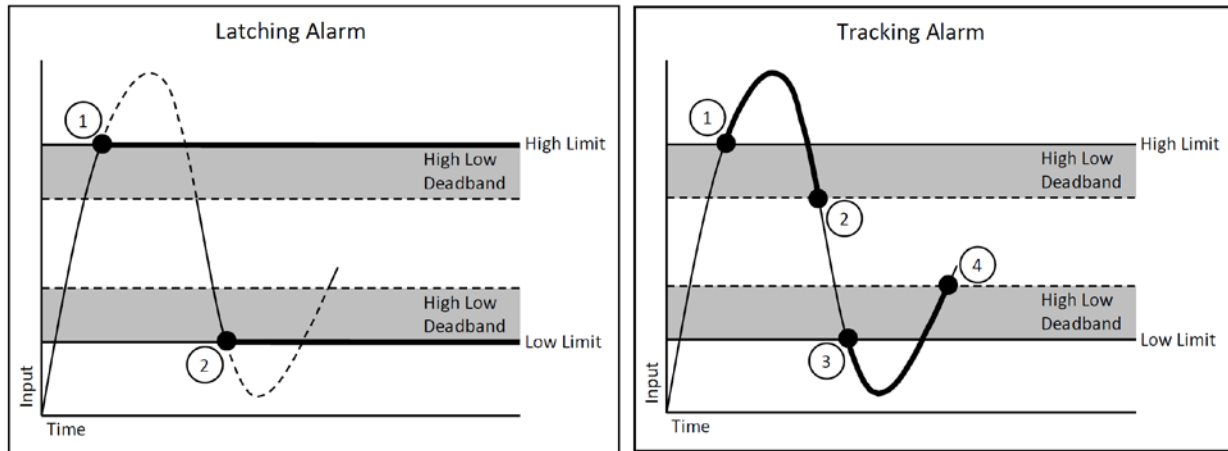


1. High Alarm Tripped
2. Low Alarm Tripped

1. High Alarm Tripped
2. High Alarm Reset
3. Low Alarm Tripped
4. Low Alarm Reset

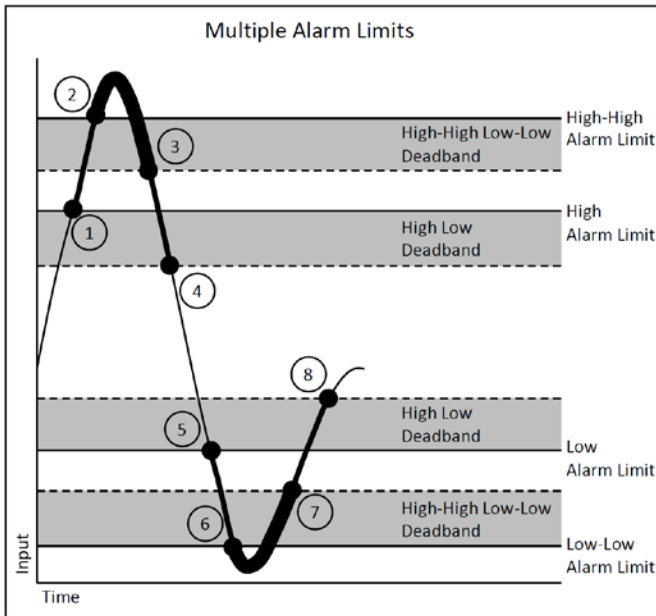

1. High Alarm Trip
2. High-High Alarm Trip
3. High-High Alarm Reset
4. High Alarm Reset
5. Low Alarm trip
6. Low-Low Alarm Trip
7. Low-Low Alarm Reset
8. Low Alarm Reset

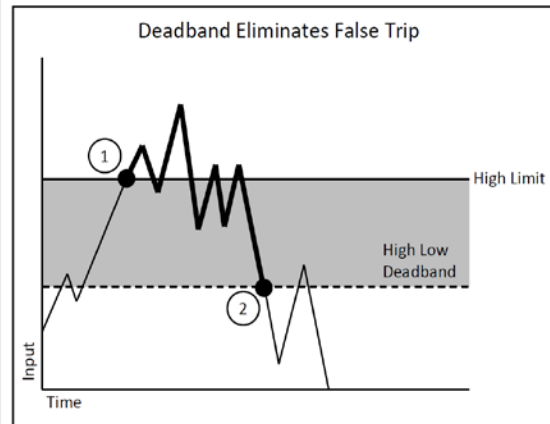

1. High Alarm Trip
2. High Alarm Reset

**Figure 7: Alarm Parameters and Functionality**

## 12.0 Setting and Monitoring Alarms

Address Maps for each module are found at the end of this manual. An excerpt from the MAQ20-VDN module Address Map is shown below. Alarm parameters are stored in registers at addresses 700 – 999.

**NOTE:** When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to Section 9.0 for further details on Registration Number.

Address Range 700 - 999: Alarm Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
700	R/W	1	Alarm Status, Low-Low	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
701	R/W	1	Alarm Status, Low	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
702	R/W	1	Alarm Status, High	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
703	R/W	1	Alarm Status, High-High	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
704	R/W	1	Alarm Enable	1 = Enabled 0 = Disabled	See below	INT16
710	R/W	8	Alarm Configuration	Alarm Configuration	See below	INT16
730	R/W	8	High Limit	High Alarm Limit	-4096 to 4095	INT16
750	R/W	8	Low Limit	Low Alarm Limit	-4096 to 4095	INT16
770	R/W	8	High Low Deadband	Deadband for High Low Alarm	-4096 to 4095	INT16
790	R/W	8	High-High Limit	High-High Alarm Limit	-4096 to 4095	INT16
810	R/W	8	Low-Low Limit	Low-Low Alarm Limit	-4096 to 4095	INT16
830	R/W	8	High-High Low-Low Deadband	Deadband for High-High Low-Low Alarm	-4096 to 4095	INT16

Alarms are configured by writing a code to the register at address  $710 + 2000 * R$  and then enabled and disabled by writing a 1 or 0 to the register at address  $704 + 2000 * R$ . Alarm Status is stored in registers at address range 700 – 703, offset by  $2000 * R$ . The code written to address  $710 + 2000 * R$  is the sum of a number representing the type of alarm and a number representing the alarm limits to be monitored.

**Alarm Configuration Value = Alarm Type Code + Alarm Limit Code**

Alarm Type	Code	Alarm Limit	Code
Tracking	1000	Low Limit	100
Latching	2000	High Limit	200
		High/Low Limit	300
		Low-Low Limit	400
		High/High Limit	500
		All Limits	600

If the Alarm Configuration Value = 0, the Alarm is Off (Disabled). The Alarm for a given channel cannot be turned On (Enabled) until a valid, non-zero value is written to the Alarm Configuration register.

**Example:** A MAQ20-VDN module with serial number 1234567-89 is installed in a system and has been assigned a Registration Number of 3. Set up the module to have a Tracking Alarm on Channel 1 with a High limit of 3000 counts, a Low limit of 500 counts and a Deadband of 100 counts.

The MAQ20-VDN module with s/n 1234567-89 has an address offset of  $2000 * 3 = 6000$

- 1.) Write to register address  $6000 + 711 = 6711$  a value of  $1000 + 300 = 1300$  to set a Tracking Alarm with High Low limit
- 2.) Write to register address  $6000 + 731 = 6731$  a data value of 3000 to set the High limit
- 3.) Write to register address  $6000 + 751 = 6751$  a data value of 500 to set the Low limit
- 4.) Write to register address  $6000 + 771 = 6771$  a data value of 100 to set the Deadband for the High and Low limits
- 5.) Write to register address  $6000 + 704 = 6704$  the equivalent of bit code 0000 0010 = 3 to enable Channel 1

When an alarm condition is reached as specified by the above parameters, the Alarm Status registers are written in response to the events and the red LED on the module is lit.

- 1.) Read register address  $6000 + 702 = 6702$  to view the status of the Low Alarm.  
If bit code 0000 0010 = 3 is read, a Low Alarm has occurred on Channel 1.
- 2.) Read register address  $6000 + 703 = 6703$  to view the status of the High Alarm

### 13.0 Signal Averaging

Signal averaging can be set on a per-channel basis by configuring the Average Weight. Average Weight is calculated as  $2^x$  where  $x = 0$  to 15 and the default value is  $x = 0$ . The running average is then calculated as follows:

$$\text{Average} = \text{Average} + \frac{\text{Sampled Value} - \text{Average}}{\text{Average Weight}}$$

Address Maps for each module are found at the end of this manual. Excerpts from the MAQ20-VDN module Address Map are shown below. Signal averaging parameters are stored in registers at addresses 120 – 140.

**NOTE:**

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to Section 9.0 for further details on Registration Number.

Address Range 100 - 699: Module Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
120	R/W	8	Average Weight	Weight for Average Calculation	0 to 15	INT16

Address Range 1000 - 1699: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1000	R	8	Channel Data	Data for all 8 Channels	-4096 to 4095	INT16
1016	R	1	Alarm Status	Status of Low-Low Alarm	0 to 65,535	INT16
1017	R	1	Alarm Status	Status of Low Alarm	0 to 65,535	INT16
1018	R	1	Alarm Status	Status of High Alarm	0 to 65,535	INT16
1019	R	1	Alarm Status	Status of High-High Alarm	0 to 65,535	INT16
1030	R/W	8	Data Minimum	Minimum for each of 8 Channels	-4096 to 4095	INT16
1050	R/W	8	Data Maximum	Maximum for each of 8 Channels	-4096 to 4095	INT16
1070	R/W	8	Data Average	Average for each of 8 Channels	-4096 to 4095	INT16
1090	R	8	Channel 0 Data	Last 8 readings for Channel 0	-4096 to 4095	INT16
1100	R	8	Channel 1 Data	Last 8 readings for Channel 1	-4096 to 4095	INT16
1110	R	8	Channel 2 Data	Last 8 readings for Channel 2	-4096 to 4095	INT16
1120	R	8	Channel 3 Data	Last 8 readings for Channel 3	-4096 to 4095	INT16
1130	R	8	Channel 4 Data	Last 8 readings for Channel 4	-4096 to 4095	INT16
1140	R	8	Channel 5 Data	Last 8 readings for Channel 5	-4096 to 4095	INT16
1150	R	8	Channel 6 Data	Last 8 readings for Channel 6	-4096 to 4095	INT16
1160	R	8	Channel 7 Data	Last 8 readings for Channel 7	-4096 to 4095	INT16



**Example:** A MAQ20-VDN module with serial number 1234567-89 is installed in a system and has been assigned a Registration Number of 4. Set the Average Weight of Channel 4 to 8, then read the following parameters for Channel 4: Current Data, Min Data, Max Data, Average Data and the last 8 readings.

The MAQ20-VDN module with s/n 1234567-89 has an address offset of  $2000 * 4 = 8000$

- 1.) Write to register address  $8000 + 124 = 8124$  a data value of 8 to set the Average Weight
- 2.) Read from register address  $8000 + 1034 = 9034$  the min data from Channel 4
- 3.) Read from register address  $8000 + 1054 = 9054$  the max data from Channel 4
- 4.) Read from register address  $8000 + 1074 = 9074$  the average data from Channel 4 with weight 8
- 5.) Read from register address 8000 + 1130 to 1138 = 9130 - 9138 the last 8 readings from Channel 4

## 14.0 Reset Functions

Two types of firmware resets are supported in the MAQ<sup>®</sup>20 I/O modules:

**Standard Reset** is used to put the module in a user-defined state. The parameters listed below will be set to the last state saved to EEPROM. Parameters stored in EEPROM are not affected.

**Reset-to-Default** reverts the module to the settings used at the factory during manufacture. It performs the standard reset actions plus resets most non-volatile parameters to default settings. Parameters stored in EEPROM are not affected.

Table 3 shows what parameters are affected for each reset.

**Table 3: Parameters Affected by Standard Reset and Reset-to-Default**

RESET TYPE	PARAMETERS
Standard Reset	Disables all Alarms Resets Min, Max and Average registers to 0 Clears all Status and Diagnostic registers
Reset-to-Default	All parameters listed under Standard Reset, plus: Clears all Alarm Limits and Deadbands

**Reset Registers**

Writing a valid data value to the Reset Register will force the module to perform a specified reset. Write 0 to perform Standard Reset and write 255 to perform Reset-to-Default.

**NOTE:**

The MAQ<sup>®</sup>20 I/O modules send a response to the reset register written before carrying out the reset. This means the module will be unresponsive to commands for approximately 3 seconds.

**Power-On-Reset (POR) and Brownout**

MAQ<sup>®</sup>20 I/O modules utilize a brown-out detect circuit and watchdog timer to ensure reliable and predictable operation under all conditions. Upon power cycle, brown-out detect or any extreme circumstance under which the watchdog timer expires, a Standard Reset is performed, and parameters stored in EEPROM are loaded to the appropriate registers.

**15.0 Module Identification and Status Registers**

Module identification including model number, serial number, date code and firmware revision are stored in registers at addresses 0 – 44.

I/O modules in a system are identified in general by their model number (MAQ20-VDN, MAQ20-JTC, etc.) and uniquely by their Serial Number printed on the side label (1234567-89). When I/O modules are installed in the system, only a general identifier is visible on the front of the module (V, I, TC, etc.). Wire tags or additional labeling applied to the module terminal block may be used for visible unique identification in an installed system. Additionally, the system has the utility to provide a visible indication of module response for identification. Any write to address 98 plus the offset based on the Registration Number will blink the STATUS LED on the top angled surface of the module at a 5Hz rate for 5 seconds.

For troubleshooting purposes, reset status, communications errors, and invalid data written to a module are monitored and made available to the user. Registers at addresses 1900 – 1910 hold this information.

## 16.0 LED Indicators

A set of 5 LEDs on the top panel of the MAQ®20 I/O modules indicate module power, operation, communication and alarm status.



**Figure 8: MAQ®20 Faceplate**

### LED Function and Troubleshooting Tips:

#### PWR

Normal operation: BLUE, solid lit

LED Off: Abnormal power situation

- Verify that a MAQ20-COMx is present in the system.
- Verify that the MAQ20-COMx module has 7-34VDC power connected and turned on.
- Determine if the module is communicating by observing the TX and RX LEDs

#### STAT

Normal operation: GREEN, 1 Hz blinking

Module Detect: A write to the Module Detect Register will force this LED to blink at 5Hz rate for 5 seconds so the module location in a system can be visually identified. Referring to the Address Map, this register is at address 98 off of the module base address.

LED Constant On or Constant Off: Abnormal operation

- Remove and reinstall module to force a reset.
- Remove and reinstall module into another backbone position.
- Determine if the module is communicating by observing the TX and RX LEDs.

## **RX, TX**

Normal Operation – YELLOW, rapid blinking during communication with MAQ20-COMx module

LED Constant Off: Abnormal operation or no communications to MAQ20-COMx module

- Verify communications by sending a request for data. Note that the fast communications rate used on the system backbone will result in the LED appearing dim due to short blinking cycle.
- Verify that the PWR and STAT LED indicate normal operation.
- Verify that there is only one MAQ20-COMx module installed in the system.

## **ALM**

Normal operation: Off

Alarm Condition Detected: RED, solid lit.

- One or more alarms have been tripped.
- Read Alarm Registers based on Alarm Configuration to determine system status

The following troubleshooting tips can be used to further diagnose and fix system problems:

- Remove and reinstall MAQ<sup>®</sup>20 I/O module and/or MAQ20-COMx module to verify proper insertion into Backbone.
- Remove and reinstall MAQ<sup>®</sup>20 I/O module into another backbone position.
- If a Backbone extension cable is used, ensure that the connections are made correctly.

## 17.0 Specifications

### MAQ®20 VOLTAGE AND CURRENT INPUT MODULE

Typical at  $T_A = +25^{\circ}\text{C}$  and +24V system power

Model Number	Description
MAQ20-MVDN	8-channel, milliVolt, Differential Input $\pm 50\text{mV}$ , $\pm 100\text{mV}$ , $\pm 250\text{mV}$ , $\pm 1.0\text{V}$ , $\pm 2.0\text{V}$ (Default $\pm 1.0\text{V}$ )
MAQ20-VDN	8-channel, Volt, Differential Input $\pm 5\text{V}$ , $\pm 10\text{V}$ , $\pm 20\text{V}$ , $\pm 40\text{V}$ , $\pm 60\text{V}$ (Default $\pm 5\text{V}$ )
MAQ20-VSN	16-channel, Volt, Single-Ended Input $\pm 5\text{V}$ , $\pm 10\text{V}$ , $\pm 20\text{V}$ , $\pm 40\text{V}$ , $\pm 60\text{V}$ (Default $\pm 5\text{V}$ )
MAQ20-IDN	8-channel, milliAmp, Differential Input 0-20mA, 4-20mA (Default 0-20mA)
MAQ20-ISN	16-channel, milliAmp, Single-Ended Input 0-20mA, 4-20mA (Default 0-20mA)
<b>Per Channel Setup</b>	Individually configurable for range, alarms, averaging
<b>Input Protection</b>	
Continuous	240Vrms max (-VDN, -VSN, -IDN, -ISN)
Transient	150Vrms max (-MVDN)
<b>CMV</b>	ANSI/IEEE C37.90.1
Channel-to-Bus	1500Vrms, 1 min
Channel-to-Channel	$\pm 28\text{V}$ peak (-VDN)
Transient	$\pm 3\text{V}$ peak (-MVDN, -IDN), 0V (-VSN, -ISN)
<b>CMR</b>	ANSI/IEEE C37.90.1
<b>NMR</b>	100dB @ 50/60 Hz
<b>Accuracy<sup>(1)</sup></b>	30dB @ 50/60 Hz
<b>Linearity / Conformity</b>	$\pm 0.035\%$ span
<b>Resolution</b>	$\pm 0.02\%$ span
<b>Stability</b>	0.012% span
Zero	$\pm 15\text{ppm}/^{\circ}\text{C}$
Span	$\pm 35\text{ppm}/^{\circ}\text{C}$
<b>Bandwidth</b>	3Hz
<b>Scan Rate</b>	
MAQ20-VSN, MAQ20-IDN, MAQ20-ISN	200 Ch/s
MAQ20-MVDN, MAQ20-VDN	20 Ch/s
<b>Alarms</b>	High / High-High / Low / Low-Low
<b>Power Supply Current</b>	30mA
<b>Dimensions (h)(w)(d)</b>	4.51" x 0.60" x 3.26" (114.6mm x 15.3mm x 82.8mm)
<b>Environmental</b>	
Operating Temperature	$-40^{\circ}\text{C}$ to $+85^{\circ}\text{C}$
Storage Temperature	$-40^{\circ}\text{C}$ to $+85^{\circ}\text{C}$
Relative Humidity	0 to 95%, non-condensing
<b>Emissions, EN61000-6-4</b>	ISM Group 1
Radiated, Conducted	Class A
<b>Immunity EN61000-6-2</b>	ISM Group 1
RF	Performance A +/- 0.5% Span Error
ESD, EFT	Performance B
Certifications	Heavy Industrial CE
	UL/cUL (Class I, Div 2, Groups A, B, C, D) file E232858
	ATEX Pending

(1) Includes linearity/conformity, hysteresis, and repeatability.

## 18.0 MAQ20-MVDN and MAQ20-VDN Address Map and Range Table

Tables in this section outline the MAQ20-MVDN and MAQ20-VDN address space. Data in these registers contains all permanent and user settable information for module configuration, status, operation of all functions, data read/write, and data storage. Table columns list the following information:

**Start Address:** Start address for the specified quantity of addresses. The start address is offset by  $2000 * R$  where R is the module Registration Number.

**Read/Write:** Indicates whether data at the address is Read, Write or both.

**Number of Registers:** The number of 16-bit registers reserved for the specified contents.

**Contents:** Parameter stored at the specified address.

**Description:** Details, examples, limits, and default values for the parameter stored at the specified address.

**Data Range:** Valid data read from or written to an address range. Data not in this range which is written to an address may return a Modus Exception 3, Illegal Data, or may be ignored.

**Data Type:** The type of data stored at the specified address.

**ASCII** 0123456789ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz, -, " "

**INT16** 16-bit integer value, 0 to 65535, unless otherwise indicated. Stored at a single address.

**INT32** 32-bit integer value, 0 to 4294967295, unless otherwise indicated. Stored at two 16-bit addresses. MSB is stored at address N, LSB is stored at address N+1.

### NOTE:

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to Section 9.0 for further details on Registration Number.

Table 4: MAQ20-MVDN Address Map

Address Range 0 - 99: Module Information						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
0	R	15	Device Description	MAQ20-MVDN MAQ20-VDN	Characters, Numbers, "-" and Space	ASCII
19	R	11	Serial Number	S1234567-89	Characters, Numbers, "-" and Space	ASCII
30	R	5	Date Code	D1510	Characters, Numbers	ASCII
35	R	5	Firmware Rev	F1.00	Characters, Numbers and "."	ASCII
40	R	1	Input Channels	8 Input Channels	8	ASCII
41	R	1	Output Channels	0 Output Channels	0	ASCII
98	W	1	Module Detect	Any write will blink Status LED at 5Hz for 5 seconds	0 to 65,535	INT16
99	W	1	Reset Register	0 = Standard Reset, 255 = Reset to Default	0, 255	INT16

Address Range 100 - 699: Module Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
100	R/W	8	Input Range	Range for each of 8 channels	See Table 5	INT16
119	W	1	Save to EEPROM	0 = Gain, Avg Weight, Scan List	0	INT16
120	R/W	8	Average Weight	Weight for Average Calculation	0 to 15	INT16
140	R/W	8	Channel Enable	0 = Disable 1 = Enable (default)	0 or 1	INT16

**Table 4: MAQ20-MVDN Address Map**

<b>Address Range 700 - 999: Alarm Configuration</b>						
<b>Start Address</b>	<b>Read/Write</b>	<b>Number of Registers</b>	<b>Contents</b>	<b>Description</b>	<b>Data Range</b>	<b>Data type</b>
700	R/W	1	Alarm Status, Low-Low	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
701	R/W	1	Alarm Status, Low	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
702	R/W	1	Alarm Status, High	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
703	R/W	1	Alarm Status, High-High	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
704	R/W	1	Alarm Enable	1 = Enabled 0 = Disabled	See Section 12.0	INT16
710	R/W	8	Alarm Configuration	Alarm Configuration	See Section 12.0	INT16
730	R/W	8	High Limit	High Alarm Limit	-4096 to 4095	INT16
750	R/W	8	Low Limit	Low Alarm Limit	-4096 to 4095	INT16
770	R/W	8	High Low Deadband	Deadband for High Low Alarm	-4096 to 4095	INT16
790	R/W	8	High-High Limit	High-High Alarm Limit	-4096 to 4095	INT16
810	R/W	8	Low-Low Limit	Low-Low Alarm Limit	-4096 to 4095	INT16
830	R/W	8	High-High Low-Low Deadband	Deadband for High-High Low-Low Alarm	-4096 to 4095	INT16



Table 4: MAQ20-MVDN Address Map

Address Range 1000 - 1699: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1000	R	8	Channel Data	Data for each of 8 Channels	-4096 to 4095	INT16
1016	R	1	Alarm Status	Status of Low-Low Alarm	0 to 65,535	INT16
1017	R	1	Alarm Status	Status of Low Alarm	0 to 65,535	INT16
1018	R	1	Alarm Status	Status of High Alarm	0 to 65,535	INT16
1019	R	1	Alarm Status	Status of High-High Alarm	0 to 65,535	INT16
1030	R/W	8	Data Minimum	Minimum for each of 8 Channels	-4096 to 4095	INT16
1050	R/W	8	Data Maximum	Maximum for each of 8 Channels	-4096 to 4095	INT16
1070	R/W	8	Data Average	Average for each of 8 Channels	-4096 to 4095	INT16
1090	R	8	Channel 0 Data	Last 8 readings for Channel 0	-4096 to 4095	INT16
1100	R	8	Channel 1 Data	Last 8 readings for Channel 1	-4096 to 4095	INT16
1110	R	8	Channel 2 Data	Last 8 readings for Channel 2	-4096 to 4095	INT16
1120	R	8	Channel 3 Data	Last 8 readings for Channel 3	-4096 to 4095	INT16
1130	R	8	Channel 4 Data	Last 8 readings for Channel 4	-4096 to 4095	INT16

Table 4: MAQ20-MVDN Address Map

Address Range 1000 - 1699: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1140	R	8	Channel 5 Data	Last 8 readings for Channel 5	-4096 to 4095	INT16
1150	R	8	Channel 6 Data	Last 8 readings for Channel 6	-4096 to 4095	INT16
1160	R	8	Channel 7 Data	Last 8 readings for Channel 7	-4096 to 4095	INT16

Table 4: MAQ20-MVDN Address Map

Address Range 1700 - 1899: Input Ranges						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
<b>1700</b>	R	1	<b>Range Count</b>	<b>Number of ranges supported</b>	<b>1 to 10</b>	<b>INT16</b>
<b>1710</b>	R	1	<b>Range 0</b>	<b>Engineering -fs.</b>	<b>-32,768 to 32,767</b>	<b>INT16</b>
1711	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1712	R	1	Range 0	Engineering +fs	-32,768 to 32,767	INT16
1713	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1714	R	1	Range 0	+fs & -fs multiplier Factor $10^x$	-32,768 to 32,767	INT16
1715	R	1	Range 0	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1716	R	1	Range 0	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1717	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1718	R	1	Range 0	Count Value of -fs.	-32,768 to 32,767	INT16
1719	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1720	R	1	Range 0	Count Value of +fs.	-32,768 to 32,767	INT16
<b>1730</b>	<b>R</b>	<b>1</b>	<b>Range 1</b>	<b>Engineering -fs.</b>	<b>-32,768 to 32,767</b>	<b>INT16</b>
1731	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1732	R	1	Range 1	Engineering +fs	-32,768 to 32,767	INT16
1733	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1734	R	1	Range 1	+fs & -fs multiplier Factor $10^x$	-32,768 to 32,767	INT16
1735	R	1	Range 1	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1736	R	1	Range 1	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1737	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1738	R	1	Range 1	Count Value of -fs.	-32,768 to 32,767	INT16
1739	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1740	R	1	Range 1	Count Value of +fs.	-32,768 to 32,767	INT16

Table 4: MAQ20-MVDN Address Map

Address Range 1700 - 1899: Input Ranges						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
<b>1750</b>	<b>R</b>	<b>1</b>	<b>Range 2</b>	<b>Engineering -fs.</b>	<b>-32,768 to 32,767</b>	<b>INT16</b>
1751	R	1	Range 2	Future Use	-32,768 to 32,767	INT16
1752	R	1	Range 2	Engineering +fs	-32,768 to 32,767	INT16
1753	R	1	Range 2	Future Use	-32,768 to 32,767	INT16
1754	R	1	Range 2	+fs & -fs multiplier Factor $10^x$	-32,768 to 32,767	INT16
1755	R	1	Range 2	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1756	R	1	Range 2	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1757	R	1	Range 2	Future Use	-32,768 to 32,767	INT16
1758	R	1	Range 2	Count Value of -fs.	-32,768 to 32,767	INT16
1759	R	1	Range 2	Future Use	-32,768 to 32,767	INT16
1760	R	1	Range 2	Count Value of +fs.	-32,768 to 32,767	INT16
<b>1770</b>	<b>R</b>	<b>1</b>	<b>Range 3</b>	<b>Engineering -fs.</b>	<b>-32,768 to 32,767</b>	<b>INT16</b>
1771	R	1	Range 3	Future Use	-32,768 to 32,767	INT16
1772	R	1	Range 3	Engineering +fs	-32,768 to 32,767	INT16
1773	R	1	Range 3	Future Use	-32,768 to 32,767	INT16
1774	R	1	Range 3	+fs & -fs multiplier Factor $10^x$	-32,768 to 32,767	INT16
1775	R	1	Range 3	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1776	R	1	Range 3	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1777	R	1	Range 3	Future Use	-32,768 to 32,767	INT16
1778	R	1	Range 3	Count Value of -fs.	-32,768 to 32,767	INT16
1779	R	1	Range 3	Future Use	-32,768 to 32,767	INT16
1780	R	1	Range 3	Count Value of +fs.	-32,768 to 32,767	INT16

Table 4: MAQ20-MVDN Address Map

Address Range 1700 - 1899: Input Ranges						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1790	R	1	Range 4	Engineering -fs.	-32,768 to 32,767	INT16
1791	R	1	Range 4	Future Use	-32,768 to 32,767	INT16
1792	R	1	Range 4	Engineering +fs	-32,768 to 32,767	INT16
1793	R	1	Range 4	Future Use	-32,768 to 32,767	INT16
1794	R	1	Range 4	+fs & -fs multiplier Factor 10 <sup>x</sup>	-32,768 to 32,767	INT16
1795	R	1	Range 4	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1796	R	1	Range 4	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1797	R	1	Range 4	Future Use	-32,768 to 32,767	INT16
1798	R	1	Range 4	Count Value of -fs.	-32,768 to 32,767	INT16
1799	R	1	Range 4	Future Use	-32,768 to 32,767	INT16
1800	R	1	Range 4	Count Value of +fs.	-32,768 to 32,767	INT16

Address Range 1900 - 1999: Status Registers						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1900	R/W	1	Watchdog Flag	1 = Watchdog Reset, 0 = Normal	0 or 1	INT16
1901	R/W	1	BrownOut Flag	1 = BrownOut Reset, 0 = Normal	0 or 1	INT16
1902	R/W	1	I2C Error	I2C TX Error Counter	0 to 65,535	INT16
1903	R/W	1	I2C Error	I2C RX Error Counter	0 to 65,535	INT16
1906	R/W	1	Numeric Error	Increments when a value received is outside of the allowed range	0 to 65,535	INT16
1908	R/W	1	UART RX Error	UART RX Error Counter. Command Too Short	0 to 65,535	INT16
1909	R/W	1	UART RX Error	UART RX Error Counter. Command Too Long	0 to 65,535	INT16
1910	R/W	1	UART RX Error	UART RX Error Counter. Command received in invalid state	0 to 65,535	INT16

**Table 5: MAQ20-MVDN and MAQ20-VDN Range Table**

	Range	Standard Input Voltage	Equivalent Counts	Over/Under Range	Equivalent Counts	Volts per Count
<b>MAQ20-VDN</b>	0	-60V to +60V	-4016 to 4016	-61.2V to +61.2V	-4096 to 4095	$14.94 \times 10^{-3}$
	1	-40V to +40V	-4016 to 4016	-40.8V to +40.8V	-4096 to 4095	$9.961 \times 10^{-3}$
	2	-20V to +20V	-4016 to 4016	-20.4V to +20.4V	-4096 to 4095	$4.980 \times 10^{-3}$
	3	-10V to +10V	-4016 to 4016	-10.2V to +10.2V	-4096 to 4095	$2.490 \times 10^{-3}$
	4	-5V to +5V (Default)	-4016 to 4016	-5.1V to +5.1V	-4096 to 4095	$1.245 \times 10^{-3}$
<b>MAQ20-MVDN</b>	0	-2V to +2V	-4016 to 4016	-2.04V to +2.04V	-4096 to 4095	$0.498 \times 10^{-3}$
	1	-1V to +1V (Default)	-4016 to 4016	-1.02V to +1.02V	-4096 to 4095	$0.249 \times 10^{-3}$
	2	-250mV to +250mV	-4016 to 4016	-255mV to +255mV	-4096 to 4095	$62.25 \times 10^{-6}$
	3	-100mV to +100mV	-4016 to 4016	-102mV to +102mV	-4096 to 4095	$24.90 \times 10^{-6}$
	4	-50mV to +50mV	-4016 to 4016	-51mV to +51mV	-4096 to 4095	$12.45 \times 10^{-6}$

**Table 6: MAQ20-MVDN Special Count Readings**

Reading	Condition
<b>6000</b>	Positive Differential Input Exceeded
<b>-6000</b>	Negative Differential Input Exceeded
<b>7000</b>	Positive Common Mode Exceeded
<b>-7000</b>	Negative Common Mode Exceeded

## 19.0 MAQ20-VSN Address Map and Range Table

Tables in this section outline the MAQ20-VSN address space. Data in these registers contains all permanent and user settable information for module configuration, status, operation of all functions, data read/write, and data storage. Table columns list the following information:

**Start Address:** Start address for the specified quantity of addresses. The start address is offset by  $2000 * R$  where R is the module Registration Number.

**Read/Write:** Indicates whether data at the address is Read, Write or both.

**Number of Registers:** The number of 16-bit registers reserved for the specified contents.

**Contents:** Parameter stored at the specified address.

**Description:** Details, examples, limits, and default values for the parameter stored at the specified address.

**Data Range:** Valid data read from or written to an address range. Data not in this range which is written to an address may return a Modus Exception 3, Illegal Data, or may be ignored.

**Data Type:** The type of data stored at the specified address.

**ASCII** 0123456789ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz, -, “ “

**INT16** 16-bit integer value, 0 to 65535, unless otherwise indicated. Stored at a single address.

**INT32** 32-bit integer value, 0 to 4294967295, unless otherwise indicated. Stored at two 16-bit addresses. MSB is stored at address N, LSB is stored at address N+1.

### NOTE:

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to Section 9.0 for further details on Registration Number.

Table 7: MAQ20-VSN Address Map

Address Range 0 - 99: Module Information						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
0	R	15	Device Description	MAQ20-VSN	Characters, Numbers, "-" and Space	ASCII
19	R	11	Serial Number	S1234567-89	Characters, Numbers, "-" and Space	ASCII
30	R	5	Date Code	D1510	Characters, Numbers	ASCII
35	R	5	Firmware Rev	F1.00	Characters, Numbers and "."	ASCII
40	R	1	Input Channels	16 Input Channels	16	ASCII
41	R	1	Output Channels	0 Output Channels	0	ASCII
98	W	1	Module Detect	Any write will blink Status LED at 5Hz for 5 seconds	0 to 65,535	INT16
99	W	1	Reset Register	0 = Standard Reset, 255 = Reset to Default	0, 255	INT16

Address Range 100 - 699: Module Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
100	R/W	16	Input Range	Range for each of 16 channels	See Table 8	INT16
119	W	1	Save to EEPROM	0 = Gain, Avg Weight, Scan List	0	INT16
120	R/W	16	Average Weight	Weight for Average Calculation	0 to 15	INT16
140	R/W	16	Channel Enable	0 = Disable 1 = Enable (Default)	0 or 1	INT16

**Table 7: MAQ20-VSN Address Map**

<b>Address Range 700 - 999: Alarm Configuration</b>						
<b>Start Address</b>	<b>Read/Write</b>	<b>Number of Registers</b>	<b>Contents</b>	<b>Description</b>	<b>Data Range</b>	<b>Data type</b>
700	R/W	1	Alarm Status, Low-Low	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
701	R/W	1	Alarm Status, Low	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
702	R/W	1	Alarm Status, High	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
703	R/W	1	Alarm Status, High-High	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
704	R/W	1	Alarm Enable	1 = Enabled 0 = Disabled	See Section 12.0	INT16
710	R/W	16	Alarm Configuration	Alarm Configuration	See Section 12.0	INT16
730	R/W	16	High Limit	High Alarm Limit	-4096 to 4095	INT16
750	R/W	16	Low Limit	Low Alarm Limit	-4096 to 4095	INT16
770	R/W	16	High Low Deadband	Deadband for High Low Alarm	-4096 to 4095	INT16
790	R/W	16	High-High Limit	High-High Alarm Limit	-4096 to 4095	INT16
810	R/W	16	Low-Low Limit	Low-Low Alarm Limit	-4096 to 4095	INT16
830	R/W	16	High-High Low-Low Deadband	Deadband for High-High Low-Low Alarm	-4096 to 4095	INT16



Table 7: MAQ20-VSN Address Map

Address Range 1000 - 1699: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1000	R	16	Channel Data	Data for each of 16 Channels	-4096 to 4095	INT16
1016	R	1	Alarm Status	Status of Low-Low Alarm	0 to 65,535	INT16
1017	R	1	Alarm Status	Status of Low Alarm	0 to 65,535	INT16
1018	R	1	Alarm Status	Status of High Alarm	0 to 65,535	INT16
1019	R	1	Alarm Status	Status of High-High Alarm	0 to 65,535	INT16
1030	R/W	16	Data Minimum	Minimum for each of 16 Channels	-4096 to 4095	INT16
1050	R/W	16	Data Maximum	Maximum for each of 16 Channels	-4096 to 4095	INT16
1070	R/W	16	Data Average	Average for each of 16 Channels	-4096 to 4095	INT16
1090	R	8	Channel 0 Data	Last 8 readings for Channel 0	-4096 to 4095	INT16
1100	R	8	Channel 1 Data	Last 8 readings for Channel 1	-4096 to 4095	INT16
1110	R	8	Channel 2 Data	Last 8 readings for Channel 2	-4096 to 4095	INT16
1120	R	8	Channel 3 Data	Last 8 readings for Channel 3	-4096 to 4095	INT16
1130	R	8	Channel 4 Data	Last 8 readings for Channel 4	-4096 to 4095	INT16
1140	R	8	Channel 5 Data	Last 8 readings for Channel 5	-4096 to 4095	INT16
1150	R	8	Channel 6 Data	Last 8 readings for Channel 6	-4096 to 4095	INT16
1160	R	8	Channel 7 Data	Last 8 readings for Channel 7	-4096 to 4095	INT16
1170	R	8	Channel 8 Data	Last 8 readings for Channel 8	-4096 to 4095	INT16
1180	R	8	Channel 9 Data	Last 8 readings for Channel 9	-4096 to 4095	INT16
1190	R	8	Channel 10 Data	Last 8 readings for Channel 10	-4096 to 4095	INT16
1200	R	8	Channel 11 Data	Last 8 readings for Channel 11	-4096 to 4095	INT16
1210	R	8	Channel 12 Data	Last 8 readings for Channel 12	-4096 to 4095	INT16
1220	R	8	Channel 13 Data	Last 8 readings for Channel 13	-4096 to 4095	INT16
1230	R	8	Channel 14 Data	Last 8 readings for Channel 14	-4096 to 4095	INT16
1240	R	8	Channel 15 Data	Last 8 readings for Channel 15	-4096 to 4095	INT16

Table 7: MAQ20-VSN Address Map

Address Range 1700 - 1899: Input Ranges						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1700	R	1	Range Count	Number of ranges supported	1 to 10	INT16
1710	R	1	Range 0	Engineering -fs.	-32,768 to 32,767	INT16
1711	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1712	R	1	Range 0	Engineering +fs	-32,768 to 32,767	INT16
1713	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1714	R	1	Range 0	+fs & -fs multiplier Factor 10 <sup>x</sup>	-32,768 to 32,767	INT16
1715	R	1	Range 0	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1716	R	1	Range 0	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1717	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1718	R	1	Range 0	Count Value of -fs.	-32,768 to 32,767	INT16
1719	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1720	R	1	Range 0	Count Value of +fs.	-32,768 to 32,767	INT16
1730	R	1	Range 1	Engineering -fs.	-32,768 to 32,767	INT16
1731	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1732	R	1	Range 1	Engineering +fs	-32,768 to 32,767	INT16
1733	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1734	R	1	Range 1	+fs & -fs multiplier Factor 10 <sup>x</sup>	-32,768 to 32,767	INT16
1735	R	1	Range 1	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1736	R	1	Range 1	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1737	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1738	R	1	Range 1	Count Value of -fs.	-32,768 to 32,767	INT16
1739	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1740	R	1	Range 1	Count Value of +fs.	-32,768 to 32,767	INT16

Table 7: MAQ20-VSN Address Map

Address Range 1700 - 1899: Input Ranges						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1750	R	1	Range 2	Engineering -fs.	-32,768 to 32,767	INT16
1751	R	1	Range 2	Future Use	-32,768 to 32,767	INT16
1752	R	1	Range 2	Engineering +fs	-32,768 to 32,767	INT16
1753	R	1	Range 2	Future Use	-32,768 to 32,767	INT16
1754	R	1	Range 2	+fs & -fs multiplier Factor 10 <sup>x</sup>	-32,768 to 32,767	INT16
1755	R	1	Range 2	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1756	R	1	Range 2	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1757	R	1	Range 2	Future Use	-32,768 to 32,767	INT16
1758	R	1	Range 2	Count Value of -fs.	-32,768 to 32,767	INT16
1759	R	1	Range 2	Future Use	-32,768 to 32,767	INT16
1760	R	1	Range 2	Count Value of +fs.	-32,768 to 32,767	INT16
1770	R	1	Range 3	Engineering -fs.	-32,768 to 32,767	INT16
1771	R	1	Range 3	Future Use	-32,768 to 32,767	INT16
1772	R	1	Range 3	Engineering +fs	-32,768 to 32,767	INT16
1773	R	1	Range 3	Future Use	-32,768 to 32,767	INT16
1774	R	1	Range 3	+fs & -fs multiplier Factor 10 <sup>x</sup>	-32,768 to 32,767	INT16
1775	R	1	Range 3	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1776	R	1	Range 3	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1777	R	1	Range 3	Future Use	-32,768 to 32,767	INT16
1778	R	1	Range 3	Count Value of -fs.	-32,768 to 32,767	INT16
1779	R	1	Range 3	Future Use	-32,768 to 32,767	INT16
1780	R	1	Range 3	Count Value of +fs.	-32,768 to 32,767	INT16

Table 7: MAQ20-VSN Address Map

Address Range 1700 - 1899: Input Ranges						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1790	R	1	Range 4	Engineering -fs.	-32,768 to 32,767	INT16
1791	R	1	Range 4	Future Use	-32,768 to 32,767	INT16
1792	R	1	Range 4	Engineering +fs	-32,768 to 32,767	INT16
1793	R	1	Range 4	Future Use	-32,768 to 32,767	INT16
1794	R	1	Range 4	+fs & -fs multiplier Factor 10 <sup>x</sup>	-32,768 to 32,767	INT16
1795	R	1	Range 4	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1796	R	1	Range 4	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1797	R	1	Range 4	Future Use	-32,768 to 32,767	INT16
1798	R	1	Range 4	Count Value of -fs.	-32,768 to 32,767	INT16
1799	R	1	Range 4	Future Use	-32,768 to 32,767	INT16
1800	R	1	Range 4	Count Value of +fs.	-32,768 to 32,767	INT16

Address Range 1900 - 1999: Status Registers						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1900	R/W	1	Watchdog Flag	1 = Watchdog Reset, 0 = Normal	0 or 1	INT16
1901	R/W	1	BrownOut Flag	1 = BrownOut Reset, 0 = Normal	0 or 1	INT16
1902	R/W	1	I2C Error	I2C TX Error Counter	0 to 65,535	INT16
1903	R/W	1	I2C Error	I2C RX Error Counter	0 to 65,535	INT16
1906	R/W	1	Numeric Error	Increments when a value received is outside of the allowed range	0 to 65,535	INT16
1908	R/W	1	UART RX Error	UART RX Error Counter. Command Too Short	0 to 65,535	INT16
1909	R/W	1	UART RX Error	UART RX Error Counter. Command Too Long	0 to 65,535	INT16
1910	R/W	1	UART RX Error	UART RX Error Counter. Command received in invalid state	0 to 65,535	INT16

**Table 8: MAQ20-VSN Range Table**

Range	Standard Input Voltage	Equivalent Counts	Over/Under Range	Equivalent Counts	Volts per Count
0	-60V to +60V	-4016 to 4016	-61.2V to +61.2V	-4096 to 4095	$14.94 \times 10^{-3}$
1	-40V to +40V	-4016 to 4016	-40.8V to +40.8V	-4096 to 4095	$9.961 \times 10^{-3}$
2	-20V to +20V	-4016 to 4016	-20.4V to +20.4V	-4096 to 4095	$4.980 \times 10^{-3}$
3	-10V to +10V	-4016 to 4016	-10.2V to +10.2V	-4096 to 4095	$2.490 \times 10^{-3}$
4	-5V to +5V (Default)	-4016 to 4016	-5.1V to +5.1V	-4096 to 4095	$1.245 \times 10^{-3}$

## 20.0 MAQ20-IDN Address Map and Range Table

Tables in this section outline the MAQ20-IDN address space. Data in these registers contains all permanent and user settable information for module configuration, status, operation of all functions, data read/write, and data storage. Table columns list the following information:

**Start Address:** Start address for the specified quantity of addresses. The start address is offset by  $2000 * R$  where R is the module Registration Number.

**Read/Write:** Indicates whether data at the address is Read, Write or both.

**Number of Registers:** The number of 16-bit registers reserved for the specified contents.

**Contents:** Parameter stored at the specified address.

**Description:** Details, examples, limits, and default values for the parameter stored at the specified address.

**Data Range:** Valid data read from or written to an address range. Data not in this range which is written to an address may return a Modus Exception 3, Illegal Data, or may be ignored.

**Data Type:** The type of data stored at the specified address.

**ASCII** 0123456789ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz, -, “ “

**INT16** 16-bit integer value, 0 to 65535, unless otherwise indicated. Stored at a single address.

**INT32** 32-bit integer value, 0 to 4294967295, unless otherwise indicated. Stored at two 16-bit addresses. MSB is stored at address N, LSB is stored at address N+1.

### NOTE:

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to Section 9.0 for further details on Registration Number.

Table 9: MAQ20-IDN Address Map

Address Range 0 - 99: Module Information						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
0	R	15	Device Description	MAQ20-IDN	Characters, Numbers, "-" and Space	ASCII
19	R	11	Serial Number	S1234567-89	Characters, Numbers, "-" and Space	ASCII
30	R	5	Date Code	D1510	Characters, Numbers	ASCII
35	R	5	Firmware Rev	F1.00	Characters, Numbers and "."	ASCII
40	R	1	Input Channels	8 Input Channels	8	ASCII
41	R	1	Output Channels	0 Output Channels	0	ASCII
98	W	1	Module Detect	Any write will blink Status LED at 5Hz for 5 seconds	0 to 65,535	INT16
99	W	1	Reset Register	0 = Standard Reset, 255 = Reset to Default	0, 255	INT16

Address Range 100 - 699: Module Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
100	R/W	8	Input Range	Range for each of 8 channels	See Table 10	INT16
119	W	1	Save to EEPROM	0 = Gain, Avg Weight, Scan List	0	INT16
120	R/W	8	Average Weight	Weight for Average Calculation	0 to 15	INT16
140	R/W	8	Channel Enable	0 = Disable 1 = Enable (default)	0 or 1	INT16

Table 9: MAQ20-IDN Address Map

Address Range 700 - 999: Alarm Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
700	R/W	1	Alarm Status, Low-Low	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
701	R/W	1	Alarm Status, Low	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
702	R/W	1	Alarm Status, High	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
703	R/W	1	Alarm Status, High-High	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
704	R/W	1	Alarm Enable	1 = Enabled 0 = Disabled	See Section 12.0	INT16
710	R/W	8	Alarm Configuration	Alarm Configuration	See Section 12.0	INT16
730	R/W	8	High Limit	High Alarm Limit	See Table 10	INT16
750	R/W	8	Low Limit	Low Alarm Limit	See Table 10	INT16
770	R/W	8	High Low Deadband	Deadband for High Low Alarm	See Table 10	INT16
790	R/W	8	High-High Limit	High-High Alarm Limit	See Table 10	INT16
810	R/W	8	Low-Low Limit	Low-Low Alarm Limit	See Table 10	INT16
830	R/W	8	High-High Low-Low Deadband	Deadband for High-High Low-Low Alarm	See Table 10	INT16

Address Range 1000 - 1699: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1000	R	8	Channel Data	Data for each of 8 Channels	See Table 10	INT16
1016	R	1	Alarm Status	Status of Low-Low Alarm	0 to 65,535	INT16
1017	R	1	Alarm Status	Status of Low Alarm	0 to 65,535	INT16
1018	R	1	Alarm Status	Status of High Alarm	0 to 65,535	INT16
1019	R	1	Alarm Status	Status of High-High Alarm	0 to 65,535	INT16
1030	R/W	8	Data Minimum	Minimum for each of 8 Channels	See Table 10	INT16
1050	R/W	8	Data Maximum	Maximum for each of 8 Channels	See Table 10	INT16
1070	R/W	8	Data Average	Average for each of 8 Channels	See Table 10	INT16
1090	R	8	Channel 0 Data	Last 8 readings for Channel 0	See Table 10	INT16
1100	R	8	Channel 1 Data	Last 8 readings for Channel 1	See Table 10	INT16
1110	R	8	Channel 2 Data	Last 8 readings for Channel 2	See Table 10	INT16
1120	R	8	Channel 3 Data	Last 8 readings for Channel 3	See Table 10	INT16
1130	R	8	Channel 4 Data	Last 8 readings for Channel 4	See Table 10	INT16
1140	R	8	Channel 5 Data	Last 8 readings for Channel 5	See Table 10	INT16
1150	R	8	Channel 6 Data	Last 8 readings for Channel 6	See Table 10	INT16
1160	R	8	Channel 7 Data	Last 8 readings for Channel 7	See Table 10	INT16

Table 9: MAQ20-IDN Address Map

Address Range 1700 - 1899: Input Ranges						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1700	R	1	Range Count	Number of ranges supported	1 to 10	INT16
1710	R	1	Range 0	Engineering -fs.	-32,768 to 32,767	INT16
1711	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1712	R	1	Range 0	Engineering +fs	-32,768 to 32,767	INT16
1713	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1714	R	1	Range 0	+fs & -fs multiplier Factor 10 <sup>x</sup>	-32,768 to 32,767	INT16
1715	R	1	Range 0	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1716	R	1	Range 0	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1717	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1718	R	1	Range 0	Count Value of -fs.	-32,768 to 32,767	INT16
1719	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1720	R	1	Range 0	Count Value of +fs.	-32,768 to 32,767	INT16
1730	R	1	Range 1	Engineering -fs.	-32,768 to 32,767	INT16
1731	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1732	R	1	Range 1	Engineering +fs	-32,768 to 32,767	INT16
1733	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1734	R	1	Range 1	+fs & -fs multiplier Factor 10 <sup>x</sup>	-32,768 to 32,767	INT16
1735	R	1	Range 1	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1736	R	1	Range 1	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1737	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1738	R	1	Range 1	Count Value of -fs.	-32,768 to 32,767	INT16
1739	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1740	R	1	Range 1	Count Value of +fs.	-32,768 to 32,767	INT16

Address Range 1900 - 1999: Status Registers						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1900	R/W	1	Watchdog Flag	1 = Watchdog Reset, 0 = Normal	0 or 1	INT16
1901	R/W	1	BrownOut Flag	1 = BrownOut Reset, 0 = Normal	0 or 1	INT16
1902	R/W	1	I2C Error	I2C TX Error Counter	0 to 65,535	INT16
1903	R/W	1	I2C Error	I2C RX Error Counter	0 to 65,535	INT16
1906	R/W	1	Numeric Error	Increments when a value received is outside of the allowed range	0 to 65,535	INT16
1908	R/W	1	UART RX Error	UART RX Error Counter. Command Too Short	0 to 65,535	INT16
1909	R/W	1	UART RX Error	UART RX Error Counter. Command Too Long	0 to 65,535	INT16
1910	R/W	1	UART RX Error	UART RX Error Counter. Command received in invalid state	0 to 65,535	INT16



**Table 10: MAQ20-IDN Range Table**

Range	Standard Input Current	Equivalent Counts	Over/Under Range	Equivalent Counts	Amps per Count
0	0 to 20mA (Default)	0 to 3809	-0.5 to 21.5mA	-95 to 4095	$5.25 \times 10^{-6}$
1	4 to 20mA	762 to 3809	3.5 to 21.5mA	667 to 4095	$5.25 \times 10^{-6}$

## 21.0 MAQ20-ISN Address Map and Range Table

Tables in this section outline the MAQ20-ISN address space. Data in these registers contains all permanent and user settable information for module configuration, status, operation of all functions, data read/write, and data storage. Table columns list the following information:

**Start Address:** Start address for the specified quantity of addresses. The start address is offset by  $2000 * R$  where R is the module Registration Number.

**Read/Write:** Indicates whether data at the address is Read, Write or both.

**Number of Registers:** The number of 16-bit registers reserved for the specified contents.

**Contents:** Parameter stored at the specified address.

**Description:** Details, examples, limits, and default values for the parameter stored at the specified address.

**Data Range:** Valid data read from or written to an address range. Data not in this range which is written to an address may return a Modus Exception 3, Illegal Data, or may be ignored.

**Data Type:** The type of data stored at the specified address.

**ASCII** 0123456789ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz, -, “ “

**INT16** 16-bit integer value, 0 to 65535, unless otherwise indicated. Stored at a single address.

**INT32** 32-bit integer value, 0 to 4294967295, unless otherwise indicated. Stored at two 16-bit addresses. MSB is stored at address N, LSB is stored at address N+1.

### NOTE:

When a module is registered in a system, addresses are offset by  $2000 * R$ , where R is the Registration Number. Refer to Section 9.0 for further details on Registration Number.

Table 11: MAQ20-IDN Address Map

Address Range 0 - 99: Module Information						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
0	R	15	Device Description	MAQ20-ISN	Characters, Numbers, "-" and Space	ASCII
19	R	11	Serial Number	S1234567-89	Characters, Numbers, "-" and Space	ASCII
30	R	5	Date Code	D1510	Characters, Numbers	ASCII
35	R	5	Firmware Rev	F1.00	Characters, Numbers and "."	ASCII
40	R	1	Input Channels	16 Input Channels	16	ASCII
41	R	1	Output Channels	0 Output Channels	0	ASCII
98	W	1	Module Detect	Any write will blink Status LED at 5Hz for 5 seconds	0 to 65,535	INT16
99	W	1	Reset Register	0 = Standard Reset, 255 = Reset to Default	0, 255	INT16

Address Range 100 - 699: Module Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
100	R/W	16	Input Range	Range for each of 16 channels	See Table 12	INT16
119	W	1	Save to EEPROM	0 = Gain, Avg Weight, Scan List	0	INT16
120	R/W	16	Average Weight	Weight for Average Calculation	0 to 15	INT16
140	R/W	8	Channel Enable	0 = Disable 1 = Enable (default)	0 or 1	INT16

Table 11: MAQ20-IDN Address Map

Address Range 700 - 999: Alarm Configuration						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
700	R/W	1	Alarm Status, Low-Low	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
701	R/W	1	Alarm Status, Low	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
702	R/W	1	Alarm Status, High	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
703	R/W	1	Alarm Status, High-High	To clear a Latched alarm, write a 0 to the corresponding channel bit.	0 to 65,535	INT16
704	R/W	1	Alarm Enable	1 = Enabled 0 = Disabled	See Section 12.0	INT16
710	R/W	16	Alarm Configuration	Alarm Configuration	See Section 12.0	INT16
730	R/W	16	High Limit	High Alarm Limit	See Table 12	INT16
750	R/W	16	Low Limit	Low Alarm Limit	See Table 12	INT16
770	R/W	16	High Low Deadband	Deadband for High Low Alarm	See Table 12	INT16
790	R/W	16	High-High Limit	High-High Alarm Limit	See Table 12	INT16
810	R/W	16	Low-Low Limit	Low-Low Alarm Limit	See Table 12	INT16
830	R/W	16	High-High Low-Low Deadband	Deadband for High-High Low-Low Alarm	See Table 12	INT16

Table 11: MAQ20-IDN Address Map

Address Range 1000 - 1699: Module Data						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1000	R	16	Channel Data	Data for each of 16 Channels	See Table 12	INT16
1016	R	1	Alarm Status	Status of Low-Low Alarm	0 to 65,535	INT16
1017	R	1	Alarm Status	Status of Low Alarm	0 to 65,535	INT16
1018	R	1	Alarm Status	Status of High Alarm	0 to 65,535	INT16
1019	R	1	Alarm Status	Status of High-High Alarm	0 to 65,535	INT16
1030	R/W	16	Data Minimum	Minimum for each of 16 Channels	See Table 12	INT16
1050	R/W	16	Data Maximum	Maximum for each of 16 Channels	See Table 12	INT16
1070	R/W	16	Data Average	Average for each of 16 Channels	See Table 12	INT16
1090	R	8	Channel 0 Data	Last 8 readings for Channel 0	See Table 12	INT16
1100	R	8	Channel 1 Data	Last 8 readings for Channel 1	See Table 12	INT16
1110	R	8	Channel 2 Data	Last 8 readings for Channel 2	See Table 12	INT16
1120	R	8	Channel 3 Data	Last 8 readings for Channel 3	See Table 12	INT16
1130	R	8	Channel 4 Data	Last 8 readings for Channel 4	See Table 12	INT16
1140	R	8	Channel 5 Data	Last 8 readings for Channel 5	See Table 12	INT16
1150	R	8	Channel 6 Data	Last 8 readings for Channel 6	See Table 12	INT16
1160	R	8	Channel 7 Data	Last 8 readings for Channel 7	See Table 12	INT16
1170	R	8	Channel 8 Data	Last 8 readings for Channel 8	See Table 12	INT16
1180	R	8	Channel 9 Data	Last 8 readings for Channel 9	See Table 12	INT16
1190	R	8	Channel 10 Data	Last 8 readings for Channel 10	See Table 12	INT16
1200	R	8	Channel 11 Data	Last 8 readings for Channel 11	See Table 12	INT16
1210	R	8	Channel 12 Data	Last 8 readings for Channel 12	See Table 12	INT16
1220	R	8	Channel 13 Data	Last 8 readings for Channel 13	See Table 12	INT16
1230	R	8	Channel 14 Data	Last 8 readings for Channel 14	See Table 12	INT16
1240	R	8	Channel 15 Data	Last 8 readings for Channel 15	See Table 12	INT16

Table 11: MAQ20-IDN Address Map

Address Range 1700 - 1899: Input Ranges						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1700	R	1	Range Count	Number of ranges supported	1 to 10	INT16
1710	R	1	Range 0	Engineering -fs.	-32,768 to 32,767	INT16
1711	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1712	R	1	Range 0	Engineering +fs	-32,768 to 32,767	INT16
1713	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1714	R	1	Range 0	+fs & -fs multiplier Factor 10 <sup>x</sup>	-32,768 to 32,767	INT16
1715	R	1	Range 0	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1716	R	1	Range 0	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1717	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1718	R	1	Range 0	Count Value of -fs.	-32,768 to 32,767	INT16
1719	R	1	Range 0	Future Use	-32,768 to 32,767	INT16
1720	R	1	Range 0	Count Value of +fs.	-32,768 to 32,767	INT16
1730	R	1	Range 1	Engineering -fs.	-32,768 to 32,767	INT16
1731	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1732	R	1	Range 1	Engineering +fs	-32,768 to 32,767	INT16
1733	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1734	R	1	Range 1	+fs & -fs multiplier Factor 10 <sup>x</sup>	-32,768 to 32,767	INT16
1735	R	1	Range 1	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1736	R	1	Range 1	Engineering Units ("C", "V", etc.)	A to Z	ASCII
1737	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1738	R	1	Range 1	Count Value of -fs.	-32,768 to 32,767	INT16
1739	R	1	Range 1	Future Use	-32,768 to 32,767	INT16
1740	R	1	Range 1	Count Value of +fs.	-32,768 to 32,767	INT16

Address Range 1900 - 1999: Status Registers						
Start Address	Read/Write	Number of Registers	Contents	Description	Data Range	Data type
1900	R/W	1	Watchdog Flag	1 = Watchdog Reset, 0 = Normal	0 or 1	INT16
1901	R/W	1	BrownOut Flag	1 = BrownOut Reset, 0 = Normal	0 or 1	INT16
1902	R/W	1	I2C Error	I2C TX Error Counter	0 to 65,535	INT16
1903	R/W	1	I2C Error	I2C RX Error Counter	0 to 65,535	INT16
1906	R/W	1	Numeric Error	Increments when a value received is outside of the allowed range	0 to 65,535	INT16
1908	R/W	1	UART RX Error	UART RX Error Counter. Command Too Short	0 to 65,535	INT16
1909	R/W	1	UART RX Error	UART RX Error Counter. Command Too Long	0 to 65,535	INT16
1910	R/W	1	UART RX Error	UART RX Error Counter. Command received in invalid state	0 to 65,535	INT16

**Table 12: MAQ20-ISN Range Table**

<b>Range</b>	<b>Standard Input Current</b>	<b>Equivalent Counts</b>	<b>Over/Under Range</b>	<b>Equivalent Counts</b>	<b>Amps per Count</b>
0	0 to 20mA (Default)	0 to 3809	-0.5 to 21.5mA	-95 to 4095	$5.25 \times 10^{-6}$
1	4 to 20mA	762 to 3809	3.5 to 21.5mA	667 to 4095	$5.25 \times 10^{-6}$

## DATAFORTH WARRANTY

To view the current Dataforth Corporation Warranty, please click on the link below for the Dataforth Standard Terms and Conditions of Sale Applying to Products Sold by Dataforth Corporation. The Warranty in its entirety is Section 3. Please check this link periodically for updates.

<https://www.dataforth.com/terms-and-conditions-sale>

## APPLICATION SUPPORT

Dataforth provides timely, high-quality product support. Send an email to [support@dataforth.com](mailto:support@dataforth.com) or call **+1-800-444-7644 TOLL-FREE**.

### Returns/Repair Policy

All warranty and repair requests should be directed to the Dataforth Customer Service Department at +1-520-741-1404 or **+1-800-444-7644 TOLL-FREE**.

If a product return is required, submit a Return Material Authorization (RMA) request by visiting <https://www.dataforth.com>.

The information provided herein is believed to be reliable; however, DATAFORTH assumes no responsibility for inaccuracies or omissions. DATAFORTH assumes no responsibility for the use of this information, and all use of such information shall be entirely at the user's own risk. Application information is intended as suggestions for possible use of the products and not as explicit performance in a specific application. Prices and specifications are subject to change without notice. No patent rights or licenses to any of the circuits described herein are implied or granted to any third party. DATAFORTH does not authorize or warrant any DATAFORTH product for use in life support devices and/or systems.

MAQ20-MVDN/-VDN/-VSN/-IDN/-ISN Hardware User Manual

MA1040 Rev. C – March 2024

© 1984 - 2024 Dataforth Corporation. All Rights Reserved.

[ISO9001:2015-Registered QMS](#)